


DISHWASHER

Instructions for Use

Dishwasher

• PRESENTATION OF THE CONTROL PANEL

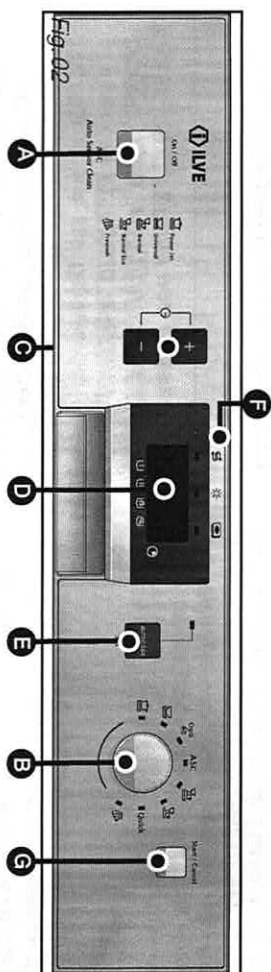

A ON / OFF:
Press this button to start your dishwasher; the screen lights up.

B Programme selector: Turn the selector to choose your programme; the indicator light that is lit shows the programme selected.

C Delay Start

D The screen shows the current time, the finishing time, the remaining time for the programme and the parameter settings.

Programme progress:
This shows you the programme's progress.

Important:
The sensitive keys **C** and **E** can only be selected when the door is closed.

E AUTOCLEAN: This sensitive key has two functions:

- A short press: selection of the AUTOCLEAN maintenance programme (Please refer to Chapter "10/The washing programmes" and Chapter "12/Cleaning your appliance).

E Set :
• A long press: Access to the Settings menus:

- Set the current time,
- Set the water softener,
- Activate or deactivate use of "regenerating salt", "rinsing product" or "4-in-1" (depending on the water softener setting - see next page).

-BEEP at end of programme,
-Set screen brightness.

F The indicator lights:

Salt:

When lit, it indicates lack of regenerating salt

Rinsing liquid:

When lit, it indicates lack of rinsing product

Washing product:

Indicates that your dishwasher is set for using "2, 3, or 4-in-1" tablets.

G Start / Cancel: Briefly press this button to start your programme.
If you make an error, to cancel a selection or cancel a programme while it is running, hold down this button for 3 seconds.



PROGRAMMES TABLE

ITEM TYPE (porcelain, pans, cutlery, glasses)	Resistant	Mixed	Mixed	Mixed	Mixed	Mixed	Mixed	Mixed	Mixed	Mixed	Mixed	Empty
FOOD RESIDUE: Quantity, type and amount	Very dirty A large amount of dried-on residue, baked-on stains, grease, residue from frying, cooked cheese, sauce, etc.	Normally dirty A normal amount of dried-on and greasy residue on everyday items. Faster, but consumes more energy.	Short 60-minute wash specially designed for daily washing with a limited amount of slightly sticky residue.	Automatically detects the amount of washing up and the level of soiling. Normal amount of dried on residue on everyday items. Faster, but consumes more energy.	Normally dirty A normal amount of dried-on, adhering residue on everyday items.	Normally dirty Recommended for normally soiled load, less consuming in energy.	Very short 30-minute wash specially designed for a small amount of daily items with a limited amount of non-greasy residue, not dried on.	Very short cycle (with no detergent) for rinsing and re-dampening the items while waiting for a wash expected in the following two days.	Specific maintenance programme accessible by pressing the AUTOCLEAN button. Empty your machine completely and remove the largest amount of residue from your filter.			
PROGRAMMES	Power Jet	Universal	Opti 60	ASC Auto Sensor Clean	Normal	Normal Eco	Quick	Power Jet	AUTOCLEAN			
PROGRAMME SEQUENCE	Hot pre-wash Washing at 70°C Rinse Hot rinse	Pre-wash Washing at 65°C Rinse Hot rinse	Washing at 60°C Rinse Hot rinse	Pre-wash Washing at 55/65°C Rinse Hot rinse	Pre-wash Washing at 55°C Rinse Hot rinse	Pre-wash Washing at 45°C Rinse Hot rinse	Washing at 45°C Rinse Hot rinse at 60°C	Cold pre-wash	Degreases and de-scales your dishwasher's tub, thereby maintaining its efficiency and prolonging its service life. For optimum results, use a cleaner specially designed for your dishwasher or use a powder or a pellet in the dispenser drawer.			
As an indication only:												
Duration in min	130'	90'	60'	90' - 110'	130'	100'	30'	15'	90'			
Water (l)	17	17	14	17 - 19	15	14.3	11	4.5	11			
Energy (kWh)	1,7	1,5	1,3 - 1,4	1,3 - 1,5	1,3	0,56	0,8	0,02	0,9			

These values refer to normal conditions of use with separate products (detergent, salt, rinsing product). They may vary according to the load, the temperature, if you use combined washing products, the water hardness and the supply voltage.