

MANUFACTURER'S WARRANTY

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Trade Practices Act 1974 (Cth), and any other statutory rights to which you may already be entitled. This warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

The manufacturer warrants this product to be free from defects in materials or workmanship for a period of 12 months from the date of purchase.

If you choose to make a claim under this manufacturer's warranty in relation to any such defects in materials or workmanship during the period of this warranty please return the product to a BIG W store. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our returns policy, a copy of which is available at the instore courtesy desk or at bigw.com.au.

Our additional liability under the terms of this warranty does not extend beyond this, and we do not accept any additional liability under the terms of this warranty for consequential loss.

 
Please note, our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.

Proof of Purchase

We recommend you keep your receipt in a safe place, as it will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, typically your receipt.



PRODUCT USE, CARE INSTRUCTIONS AND WARRANTY

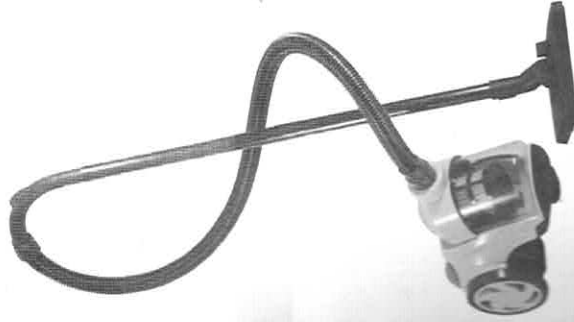

1400W CYCLONE VACUUM CLEANER

MODEL NO. STX-006E-140

 
Specifications: 220 - 240V ~ 50Hz 1400W

Please read and following this instruction before operating this product


Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

Emptying the Dust Collector

- Empty the Dust Collector as frequently as possible or when the suction power is reduced.
- To remove the Dust Collector, firmly press the release button outward (located on the Dust Collector Handle) and pull the Dust Collector up and out of the housing.

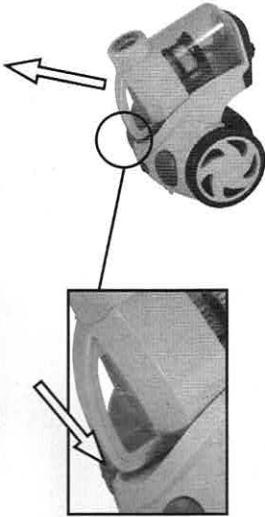

 - Unscrew the cleared bin from the upper handle assembly by rotating the clear bin anti-clockwise (when viewing from the top). Empty the contents into a rubbish bin.

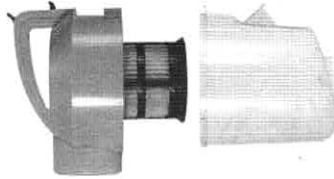

The inside of the Dust Collector and the filter can be wiped clean or washed in warm soapy water and dried thoroughly. (Refer to Maintenance Section). Refit the clear bin by locating back in place and rotating clockwise (when viewing from the top).

User Maintenance

WARNING: The plug must be removed from the power socket before any maintenance or replacement.

NOTE: To maximise the performance of your Vacuum Cleaner, you should clean your filters regularly. If the filters are broken or worn, replace them before continuing to use the Vacuum Cleaner.

 
Cleaning Filters Main Filter

Important Note: the Main Filter must be cleaned regularly for best suction performance and to prevent over-heating and damage to your Vacuum Cleaner.

- Remove the Main Filter by opening the base of the Dust Collector, grasping the Main Filter, rotating it clockwise (when viewing from the top) and pulling straight out.
- Remove the outer filter mesh tube by pulling it straight off the end of the main filter.



- Wash the Main Filter and Mesh Filter in warm mild soapy water with help from a soft bristle brush, rinse in clean fresh cold water and let dry.
- **DO NOT** harshly scrub the filters or place in a dishwasher.
- **DO NOT** use a hair drier to dry the filters.
- **NOTE:** Never use the Vacuum Cleaner with wet or damp filters. Replace the mesh filter by locating it back over the Main filter then push straight on.
- **NOTE:** The mesh-filter can only be fitted in one direction. Ensure there is no gap at the bottom. If there is a gap, turn the mesh filter over.

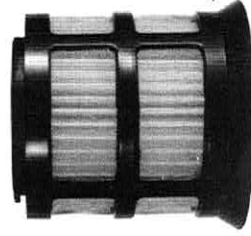

There must be no gap here

- Replace the filter assembly by locating it inside the Dust Collector, pushing in and rotating it anti-clockwise (when viewing from the top) until it locks firmly in place.

Pre Motor Filter

The round Pre Motor Filter is located behind the dust collector in the housing.

 


It is recommended to clean this filter every 3 months or sooner if required.

- To remove, grasp with your fingers and pull straight up and out.
- Wash the Pre Motor Filter in warm mild soapy water, rinse in clean fresh cold water and lay out flat to dry.
- **DO NOT** scrub the filter or place in a dishwasher.
- **DO NOT** use a hair drier to dry the filter.
- **NOTE:** Never use the Vacuum Cleaner with a wet or damp filter.
- Replace the Pre Motor Filter by locating in the slot in the Vacuum Cleaner housing and pushing in firmly.

Exhaust Filter

The exhaust filter is located inside the rear grille.

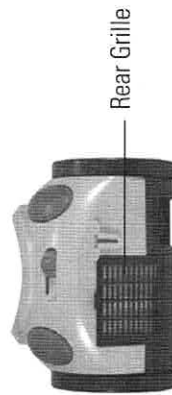

- It is recommended to clean this filter every 3 months or sooner if required. To remove the grille, press the spring loaded catch down then pull the grille out.
- Wash the exhaust filter in warm mild soapy water, rinse in clean fresh cold water and lay out flat to dry.
- Replace the Exhaust Filter. Refit the grille to the vacuum cleaner ensuring it is located and latched correctly.

- **DO NOT** scrub the filter or place in a dishwasher.
- **DO NOT** use a hair drier to dry the filter.
- **NOTE:** Never use the Vacuum Cleaner with a wet or damp filter.

Cleaning the Vacuum Cleaner and Components

- **DO NOT** clean the Vacuum Cleaner, components or accessories using petrol or any other flammable liquid or solvents, etc.
- Clean only the outside of the vacuum cleaner.
- Use only a moist cloth and mild detergent for cleaning the Vacuum Cleaner, components and accessories.
- After cleaning, wipe off the moisture on Vacuum Cleaner, components and accessories with a dry cloth.
- **DO NOT** place accessories and components in a dishwasher.

Troubleshooting

Noisy operation	Clean the Filter and empty the Dust Collector.
Low suction power	Clean the Filters and empty the Dust Collector. Check for blockages and unblock.
Over-heating/Stopping	Clean the Filters, empty the Dust Collector, check for blockages and unblock then allow it to cool.
Floor brush hard to push	Due to the strong suction of your Vacuum Cleaner, it may be difficult to push, especially over thick carpet. Rather than forcing the Floor Brush, lift the Floor Brush momentarily to allow air to flow into the vacuum releasing the built up suction pressure, then continue vacuuming. Slide open the vacuum suction adjusting plate (Sliding Block) located on the hose handle grip. This will reduce suction to the floor head.