


DGTECO

The Future of Home Entertainment



USER MANUAL

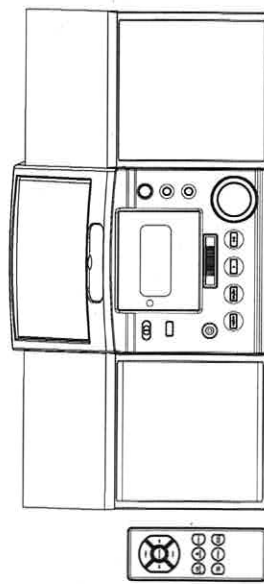

DG-1011IP
Micro CD/MP3 Docking System For iPod

Basic operation

- 1 Slide the FUNCTION button on the unit to select Radio mode.
- 2 Select the frequency band you want by pressing the BAND button.
- 3 Tune to the station you want by turning the TUNING knob.
- 4 To turn off the unit, press the ON/OFF button.

Antenna

DON'T FORGET! For optimum FM reception there is a built-in FM antenna wire on the back of the unit. Move the wire around to get the best reception. This unit is also has a built-in directional ferrite antenna. If MW reception is poor, you may have to move the unit slightly until you find a better position that gives you a better reception.

FM and FM Stereo reception

When the unit is tuned in to a stereo broadcast with a good signal, "(ST)" will be shown in the display.

If an FM station is received, but has interference, it is recommended to switch to Mono mode using the ST/MO button.

Inserting and removing your iPod

- 1 Slide the FUNCTION button to select iPod mode.
- 2 Carefully insert your iPod into the iPod Dock.

DON'T FORGET! Use the correct i-Pod dock adaptor for your model, taking care not to damage the connecting pins.

DON'T FORGET! Always ensure care is taken when inserting or removing your iPod from the connector.

Using the iPod menu system

- 1 Select iPod mode using the FUNCTION button.
- 2 Carefully insert your iPod unit into the dock.
- 3 Press the MENU button once on the remote control to enter the iPod menu system.
- 4 Press "PRE+", and "PRE-" on the remote control to navigate the various features of the iPod menu system as you would when using the iPod control buttons.
- 5 Press the ENTER button on the remote control to confirm your selection

Playback and charging your iPod

- 1 Select iPod mode using the FUNCTION button.
- 2 Insert your iPod into the dock and press the PLAY/PAUSE button to start playback.
- 3 Press the PLAY/PAUSE button to pause playback. Press this button again to resume playback.
- 4 When your iPod is docked in the unit, the internal battery will be charged.

Handling CD's

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.



Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth before use.

DON'T FORGET! Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean compact discs. These chemicals can damage the disc's surface.

Loading and unloading CD's

- 1 Slide the FUNCTION button to select CD mode.
- 2 Open the disc compartment by pressing the door release catch marked "OPEN / CLOSE" on the CD door.
- 3 When the disc compartment has opened, remove a disc from its case and place it carefully onto the tray with the label side facing outwards.

DON'T FORGET! Do not put anything except a compact disc into the compartment. Other objects may damage the unit.

- 4 Press down on the CD door until it latches into the closed position.
- 5 When the compartment is fully closed, the disc will be read automatically. The total number of tracks on the CD will appear on the LCD display.

DON'T FORGET! Keep the disc compartment closed when not in use to prevent dirt and dust from entering the mechanism. Never place more than one disc into the disc compartment at any time.

Playing CD's

- 1 Select CD mode with the Function button.
- 2 Press the PLAY / PAUSE button once to begin playback of the CD from the first track.
- 3 Press the PLAY / PAUSE button once to pause playback of the CD; the track number will flash in the display.
- 4 To resume playback, press the PLAY / PAUSE button again.
- 5 To stop playback, press the STOP button.

Selecting a different CD track

- 1 Press the SKIP buttons to skip forwards or backwards through the tracks on the CD.
- 2 Press and hold the SKIP buttons to fast forwards or backwards through the current track.
- 3 When the desired part of the track is reached, release the button and playback will resume.

Play Mode

- 1 To repeat the current track, press the PLAY MODE button once. "REPEAT" will show in the display.
- 2 To repeat the entire disc, press the PLAY MODE button twice. "REPEAT ALL" will show in the display.
- 3 To cancel repeat play, press the STOP button or press the PLAY MODE button until the repeat indicator disappears.

Random CD playback

- 1 In play mode press the PLAY MODE button on the remote control three times. "RANDOM" will show in the display, and the tracks will be played in a random order.
- 2 To cancel random play, press the STOP button or press the PLAY MODE button until the random indicator disappears.

Playing MP3 CDs

When playing a CD encoded with MP3 or WMA files, the functions available and operations are identical to those when playing a standard CD.

Intro

- 1 In play mode press the PLAY MODE button four times. "INTRO" will show in the display, and the first 10 seconds of each track will be played sequentially.
- 2 To cancel INTRO, press the STOP button or press the PLAY MODE button until the INTRO indicator disappears.

Programmed CD/MP3 playback

Up to 20 tracks can be programmed to the internal memory in any order. You may also store the same track more than once.

- 1 In stop mode, press the PROG button. "PO1" will show in the display.
- 2 Select the desired track by pressing the Skip |<< or >>| buttons.
- 3 When the desired track is chosen, press the PROG button to store the track.
- 4 "PRO2" will show in the display. Repeat steps 2 and 3 to select and store up to 20 tracks.
- 5 To listen to stored tracks, press the PLAY/PAUSE button. Use the Skip |<< >>| buttons to skip forwards or backwards through the tracks.
- 6 To clear the memory, press the STOP button twice.

USB/CD playback

- 1 Slide the FUNCTION button to select CD mode.
- 2 Press the USB/CD button to select USB mode.
- 3 Connect a USB device into the appropriate socket on the front of the unit.
- 4 The display will show the total number of tracks.
- 5 The functions available and operations are identical to those when playing a CD.

AUXILIARY IN

Connect the audio output socket of your auxiliary sound source (TV, VCR, DVD Player, Cassette Deck, Mini Disc player, etc.) to the AUX IN socket on the back of unit.

DON'T FORGET! The auxiliary function can only be used when there is a connection made to the AUX IN socket from another source.

DON'T FORGET! The connection cables are not included.

- 1 Slide the **FUNCTION** button to select the **AUX** function.
- 2 Turn your auxiliary source 'ON' and operate it as usual. The sound from the auxiliary source can be heard through the speakers.
- 3 Adjust the volume level to the desired listening level.

Earphone Socket

Connect earphones to the socket marked "PHONES" on the front of the unit. The sound output to the speakers will be muted while you listen with earphones connected.

| Problem | Possible cause | What to do |
|--------------------------------------|---|---|
| Radio | | |
| Noise or sound distorted on MW or FM | Station not tuned properly for MW or FM FM: the FM antenna wire is not extended. MW: The built-in ferrite bar antenna is not positioned correctly | Fine tune MW or FM broadcast station Extend FM wire antenna Reposition the unit until the best reception is obtained. |
| FM Stereo indicator doesn't light up | Mono mode is selected You have tuned in to a mono station The signal is too weak | Press ST/MO button Return to another FM station Return to another FM station |
| No sound in MW or FM mode | Unit not in radio mode Volume is at the minimum position | Slide the FUNCTION button to select Radio mode. Adjust volume level |
| CD/MPEG3 Player | | |
| CD Player will not play | Unit not in CD mode CD is not installed or installed correctly Disc is dirty or scratched | Select CD mode Load a CD and check it is the correct way round. Wipe the disc with a cloth or use another disc |
| CD skips while playing | | |