 


**dick smith**  
Talk to the Techxperts

---


GE6606

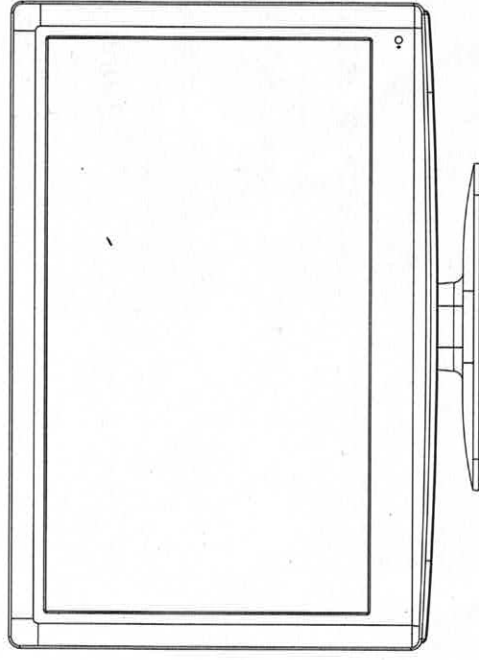

# USER MANUAL

 Thank you for purchasing this LCD TV. Before connection and operation of this product please read the manual carefully and completely. Please keep this manual for future reference.

REMOTE CONTROL

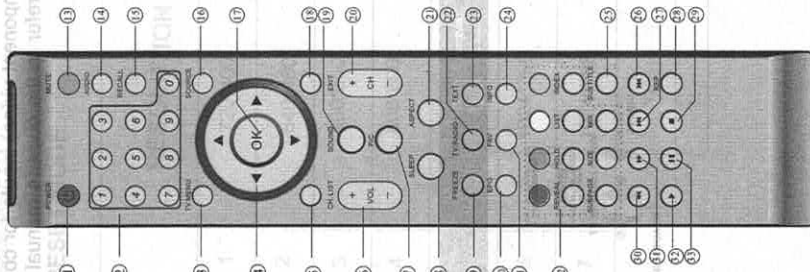

- 1: **POWER**: Press to turn the unit on or off.
- 2: **NUMERIC KEY**: Press for direct access to channels.
- 3: **TV MENU**: Press to display TV Main Menu.
- 4: **CURSOR**: Press to scroll through the Menu.
- 5: **CH LIST**: Press to display the channel list.
- 6: **VOL +/-**: Press to adjust the sound level.
- 7: **PIC**: Press to switch between picture modes.
- 8: **SLEEP**: Press to set Sleep Timer.
- 9: **FREEZE**: Press to freeze the picture you are watching.
- 10: **EPG**: Press to display the 7 Day Electronic Program Guide for information on the show you are watching.
- 11: **FAV**: Press to access your favourite channels list in TV or DTV mode.
- 12: **TELETEXT KEYS**: Refer to next page.
- 13: **MUTE**: Press to disable or enable the sound output.
- 14: **AUDIO**: Press to change the available audio /language for the program you are watching.
- 15: **RECALL**: Press to return to the previously viewed channel.
- 16: **SOURCE**: Press to display the Input Source List.
- 17: **OK**: Press to confirm Menu selections.
- 18: **EXIT**: To exit the main menu, press the Exit Button or to cancel setting selections.
- 19: **SOUND**: Press to switch between the sound modes.
- 20: **CH+/CH-**: Press to scroll through your Channel List.
- 21: **ASPECT**: Press to change the picture aspect ratio.
- 22: **TV/RADIO**: Press to switch between TV and Radio modes.
- 23: **TEXT**: Press to enter or exit TELETEXT mode.
- 24: **INFO**: To display the program information of the show you are watching, press the Info Button.
- 25: **SUBTITLE**: To turn on Subtitles press the Subtitle Button in DTV mode.
- 26: **SKIP FORWARD**: Press to skip to the next file or track in USB Mode.
- 27: **SKIP BACKWARD**: Press to skip to the previous file or Track in USB Mode
- 28: **REP**: In USB mode, select Repeat mode.
- 29: **STOP**: Press to Stop play in USB Mode.
- 30: **REWIND**: Fast Reverse Search in USB Mode.
- 31: **FAST FORWARD**: Fast Forward search in USB mode.
- 32: **PLAY**: Press in USB Mode to begin or continue Playback.
- 33: **PAUSE**: Press in USB Playback Mode to pause playback.

Insert Batteries Into the Remote Control




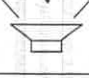 







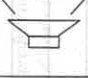 








1. Remove the battery cover.
  2. Insert the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
  3. Mount the battery cover. Replace with new batteries when the TV set begins to show the following symptoms: Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.
- Remark:**
- 1) Alkaline batteries are recommended.
  - 2) Remove batteries when they are exhausted or if the remote control is not to be used for a long time.

TELETEXT

Teletext is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers with hearing problems or who are not familiar with the transmission language (cable networks, satellite channels, etc.)

Press:	You will obtain:
TEXT	This is used to call or exit teletext modes. The summary appears with a list of items that can be accessed. Each item has a corresponding 3 digit page number. If the channel selected does not broadcast teletext, the indication 100 will be displayed and the screen will remain blank (in this case, exit teletext and select another channel).
SELECTING A PAGE ▲ ○○○ ○○○ ○○○ ▼ ○○○ ○○○ ○○○	Enter the number of the page required using the 0 to 9 up/down. Example: page 120; enter 120. The number is displayed top left, the counter turns and then the page is displayed. Repeat this operation to view another page. If the counter continues to search, this means that the page is not transmitted. Select another number.
DIRECT ACCESS TO THE ITEMS ● ● ● ● ● ● ● ● ● ●	Coloured buttons correspond to the colours at the bottom of the screen. The 4 coloured keys are used to access the items or corresponding pages. The coloured areas flash when the item or the page is not yet available.
INDEX	This returns to the contents page (usually page 100).
SUB PAGE	Certain pages contain sub-pages which are automatically displayed successively. This key is used to stop or resume sub-page acquisition. The indication appears top left.
HOLD	To freeze the page.
REVEAL	To display or hide the concealed information (games solutions).
LIST	The user can set four favourite pages to be directly linked to the four color keys. While list mode is activated, it is not possible to use TOP or FLOF navigation with the colourkeys. The favourite page numbers should be stored and restored to/from nonvolatile memory for each channel by the system software.

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
	 Noise	antenna position, direction or connection
	 Normal audio	antenna position, direction or connection
	 Noise	electronic equipment, car/motorcycle, fluorescent light
	 Mute	Volume (check if mute is activated or if the audio system connections are not correct)
	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
	 Normal audio	Colour control
	 Normal audio or weak	Retune channel
	 Noise	TV system
	 Unnormal	Antenna Loose