


Control panel

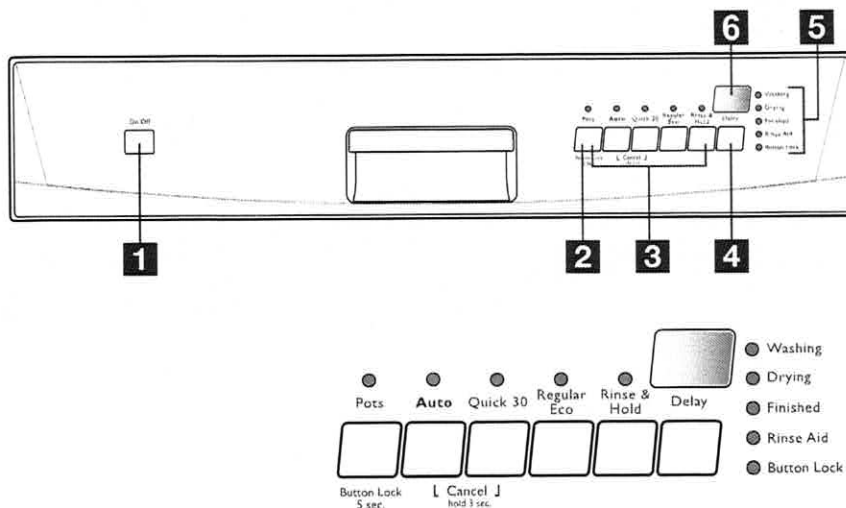

- 1 On/off button
- 2 Button Lock
- 3 Program selection buttons
- 4 Delay start button
- 5 Indicator lights
- 6 Digital display

Indicator lights

Washing	The indicator light comes on when the washing phase or the rinsing phase operates.
Drying	The indicator light comes on when the drying phase operates.
Finished	The indicator light comes on when the washing program is completed.
Rinse Aid	The indicator light comes on when it is necessary to fill the rinse aid container. Refer to 'Use of rinse aid'. The indicator light is off while a washing program operates.
Button Lock	Comes on when the Button Lock function is active.

Button Lock

The Button Lock function locks all buttons on the control panel while the washing program is in operation.

i The Button Lock function can be set only after a washing programme starts. It is not possible to set this function with the delay start.

Follow these steps to set the Button Lock function:

1. Switch on the appliance.
2. Set a washing program.
3. Start the washing program.
4. Press Button Lock for approximately 5 seconds, or until the Button Lock indicator light flashes.
5. Button Lock indicator light flashes for approximately 15 seconds.
6. When Button Lock function is active the indicator light is on with a static light.

If you press a button while Button Lock function is on, the digital display shows **CL** to inform you that the buttons are locked.

At the end of a washing program the Button Lock function is deactivated by opening and closing the door or switching off the appliance.

Important! It is not possible to deactivate the Button Lock function while a washing program is in progress. To do this you must cancel the set program. Refer to 'Select and start a washing program'.

Delay start button

Use the delay start button to delay the start of the washing program with an interval between 1 and 19 hours. Refer to 'Select and start a washing program'.

Digital display

The display shows:

- program duration,
- remaining time to the end of the program,
- end of a washing program,
- number of hours in delay start,
- fault codes,
- Button Lock function. The digital display shows **CL** when this function is active.

Setting mode

The appliance is in setting mode when all the program indicator lights are on.

The appliance must be in setting mode to set a washing program.

If a program indicator light is on, cancel the program to go back to the setting mode. Refer to 'Select and start a washing program'.

Washing programs

Washing programs

Program	Degree of soil	Type of load	Program description
Pots	Heavy soil	Crockery, cutlery, pots and pans	Prewash Main wash up to 70°C 2 intermediate rinses Final rinse Drying
Auto ¹⁾	Any	Crockery, cutlery, pots and pans	Prewash Main wash up to 50°C or 65°C 1 or 2 intermediate rinses Final rinse Drying
Quick 30 ²⁾	Normal or light soil	Crockery and cutlery (Partial load)	Main wash up to 60°C Final rinse
Regular Eco ³⁾	Normal soil	Crockery and cutlery	Prewash Main wash up to 50°C 1 intermediate rinse Final rinse Drying
Rinse & Hold	Any	Partial load (to be completed later in the day).	1 cold rinse (to prevent food scraps to bond). Detergent is not necessary with this program.

1) During the Auto program, the soil level of the dishes is given by how cloudy the water is. The program duration and consumptions can change. This depends if the appliance is fully or not and on the level of soil on the dishes. The appliance adjusts automatically the temperature of the water during the main wash.

2) This is the perfect daily program to clean a partial load. Ideal for a family of 4 persons who only want to load breakfast and dinner crockery and cutlery.

3) Test program for test institutes. Please refer to separate leaflet supplied, for test data.

Consumption values

Program ¹⁾	Energy (in kWh)	Water (in litres)
Pots	1,8 - 2,0	12 - 25
Auto	1,1 - 1,8	12 - 25
Quick 30	0,9	9
Regular Eco	0,8 - 0,88	11 - 12
Rinse & Hold	0,1	4

1) The display shows the program duration.

Select and start a washing program

i Set the washing program with the door ajar. The washing program only starts after you close the door. Until then it is possible to modify the settings.

1. Press the on/off button.
2. Make sure that the appliance is in setting mode.
3. Press one of the program buttons. Refer to the 'Washing programs' chart for program details.
 - The program indicator light comes on.
 - The Washing indicator light comes on.
 - The flashing digital display shows the program duration.
4. Close the door.
 - The washing program starts automatically.
 - The program indicator light and the Washing indicator light stay on.

i When the washing program operates, you cannot change the program. Cancel the washing program. Refer to 'Cancelling a washing program'.

Select and start a washing program with delay start

1. Press the on/off button.
2. Set a washing program.
3. Press the delay start button until the display shows the necessary delay start of the washing program.
4. Close the door.
 - The countdown starts. The display shows remaining time to the start of the washing program.
 - When the countdown is completed, the washing program starts automatically.

i With the delay start function set, the Washing indicator light goes off. Once the countdown of the delay start has ended, the washing program will start automatically and the Washing indicator light comes on.

i If you open the door during the countdown, this will interrupt the countdown. When you close the door again, the countdown continues from the point of interruption.

Cancelling delay start

1. Press and hold, approximately for 3 seconds, the two buttons above the word Cancel until all the program lights come on.
 - When you cancel delay start, you also cancel the washing program.
2. Set a new washing program.

! **Warning! Only interrupt or cancel a washing program if necessary.**

Attention! Open the door carefully. Hot steam and water can escape.

Interrupting a washing program

Open the door.

- The program stops.
- Close the door.
- The program continues from the point of interruption.

Cancelling a washing program

1. Press and hold, approximately for 3 seconds, the two buttons above the word Cancel until all the program lights come on.
2. Release the two buttons, the washing program has been cancelled.

At this point, you can follow these steps:

1. Switch off the appliance.
 2. set a new washing program.
- Fill the detergent dispenser with detergent before you set a new washing program.

End of the washing program

The washing program is complete when:

- The display shows 0.
 - The Finished indicator comes on.
1. Switch off the appliance.
 2. Open the door.
 - For better drying results, keep the door ajar for some minutes before you remove the dishes.

Let the dishes cool down before you remove them from the appliance. Hot dishes are easily damaged.

Removing the load

- First remove items from the lower basket, then from the upper basket.

If not possible, empty the appliance and close the door. Disconnect the water inlet hose and remove water from the water inlet hose.

Moving the machine

Do these steps to move the appliance:

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Remove the appliance and the hoses.
4. Do not tilt the appliance during transport.

What to do if...

The appliance does not start or stops during operation. If there is a fault, first try to find a solution to the problem yourself. Refer to following charts. If you cannot find a solution to the problem yourself, contact your dealer or the Customer Care Centre.



Warning! Switch the appliance off before you do the suggested corrective actions.

Fault code and malfunction	Possible cause and solution
<ul style="list-style-type: none"> • the digital display shows 10 The appliance does not fill with water 	<ul style="list-style-type: none"> • The water tap is blocked or restricted with limescale. Clean the water tap. • The water tap is closed. Open the water tap. • The filter in the water inlet hose is blocked. Clean the filter. • The installation of the water inlet hose is not correct. The hose can be kinked or squashed. Make sure that the installation is correct.
<ul style="list-style-type: none"> • the digital display shows 20 The appliance will not drain 	<ul style="list-style-type: none"> • There is a blockage in the sink spigot. Clean the sink spigot. • The installation of the water drain hose is not correct. The hose can be kinked or squashed. Make sure that the installation is correct.
<ul style="list-style-type: none"> • the digital display shows 30 The anti-flood device operates The program does not start 	<ul style="list-style-type: none"> • Close the water tap and contact your Customer Care Centre. • The appliance door is not closed. Close the door. • Mains plug is not connected. Plug-in appliance to the mains. • The fuse has blown out in the household fuse box. Replace the fuse. • Delay start is set. Cancel the delay start to start the program immediately.

After the check, switch on the appliance. The program continues from the point of interruption. If the malfunction shows again, contact your Customer Care Centre. If the display shows a fault code, not described in the chart, contact your Customer Care Centre.

These data are necessary to help you quickly and correctly:

- Model (Mod.)
- Product number (PNC)
- Serial number (S.N.)

For these data, refer to the rating plate.
Write the necessary data here:
Model description :

Product number :
Serial number :

The cleaning results are not satisfactory

The dishes are not clean	<ul style="list-style-type: none">• The selected washing program is not applicable for the type of load and soil.• The baskets are loaded incorrectly so that water cannot reach all surfaces.• Spray arms do not turn freely because of incorrect arrangement of the load.• The filters are dirty or not correctly installed.• The quantity of detergent is too little or missing.
The dishes are wet and dull	<ul style="list-style-type: none">• No rinse aid has been used.• The rinse aid dispenser is empty.
There are streaks, milky spots or a bluish coating on glasses and dishes	<ul style="list-style-type: none">• Decrease the rinse aid dosage.
Dry water drop stains on glasses and dishes	<ul style="list-style-type: none">• Increase rinse aid dosage.• The detergent can be the cause.