




WM15

4 Selecting a Program and Operating Your Machine

Control panel
Figure 1

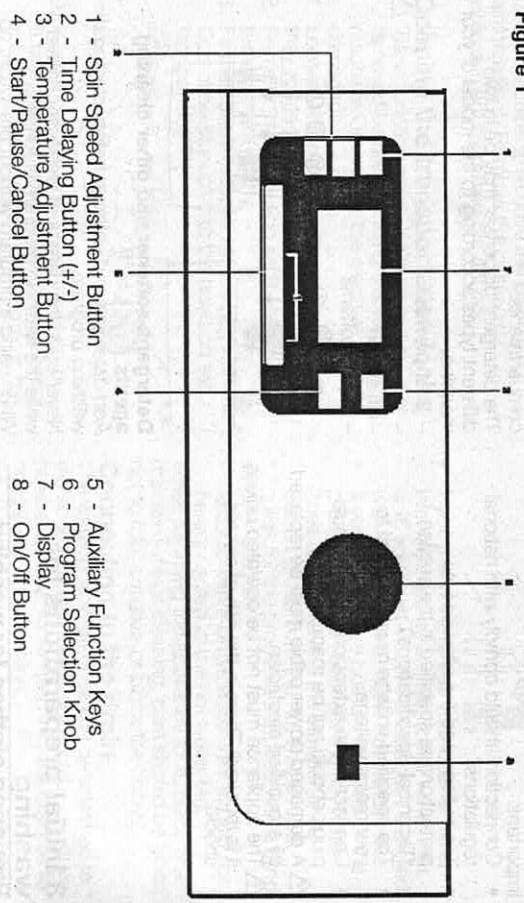


- 1 - Spin Speed Adjustment Button
- 2 - Time Delaying Button (+/-)
- 3 - Temperature Adjustment Button
- 4 - Start/Pause/Cancel Button
- 5 - Auxiliary Function Keys
- 6 - Program Selection Knob
- 7 - Display
- 8 - On/Off Button

Display symbols

- 7.a - Spin Speed Indicator
- 7.b - Temperature Indicator
- 7.c - Spin Symbol
- 7.d - Temperature Symbol
- 7.e - Remaining Time and Delaying Time Indicator
- 7.f - Programme Indicator Symbols (pre-wash/main wash/inse/softener/spin)
- 7.g - Economy Symbol
- 7.h - Time Delaying Symbol
- 7.i - Door Locked Symbol
- 7.j - Start Symbol
- 7.k - Standby Symbol
- 7.l - Auxiliary Function Symbols
- 7.m - Water cut-off Symbol (According to your machine's model)

Figure 2

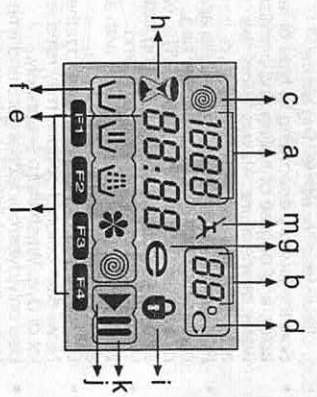

The recommended temperature and spin speed for the selected program appear. Press "Start/Pause/Cancel" button to start the program.

Sort the laundry according to type of fabric, color, degree of soiling and permissible water temperature when choosing a program.

Main programs
Depending on the type of textile, the following main programs are available:

Turning the machine on

Plug in your machine. Turn the tap on completely. Check if the hoses are connected tightly. Place the laundry in the machine. Add detergent and softener. Press the "On/Off" button.

Program selection

Turn the Programme Selection Knob to the program mode that you wish to wash your laundry.

Washing Machine

• **Cotton**
You can wash normally soiled durable cotton clothes with this program. Your laundry will be washed with vigorous washing movements during a longer washing cycle.

• **Synthetics**
You can wash your less durable clothes on this program. Lighter washing movements and shorter washing cycle is used compared to "Cottons" program. It is recommended for your synthetic clothes (such as shirts, blouses, synthetic/cotton blended garments, etc.). For curtains and lace, the "Synthetic 40" program with pre-wash and anti-creasing functions selected is recommended.

• **Woolens**
You can wash your machine-washable woolen garments on this program. Wash by selecting the proper temperature according to the labels of your clothes. It is recommended to use appropriate detergents for woolens.

Additional programs
For special cases, there are also extra programs available:
 Additional programs may differ according to the model of your machine.

• **Babycare**
Increased hygiene is provided by a longer heating period and an additional rinse cycle. It is recommended for baby clothes and clothes worn by allergic people.

• **Delicate**
You can wash your delicate clothes on this program. It has more sensitive washing movements and does not make intermediate spinning compared to "Synthetic" program.

• **Hand wash**
You can wash your woolen/delicate clothes that bear "not machine-washable" labels for which hand wash is recommended on this program. It washes the laundry with very tender washing movements without damaging your clothes.

• **Mix 40**
This program washes for a longer period at 40°C and gives the same result as the "Cottons 60°C" program, thus it saves energy. It is suitable for clothes for which you cannot use the "Cottons 60°C" program.

• **Intensive**
You can wash your durable and heavily soiled clothes on this program. In this program, your clothes will be washed for a longer time and an extra rinse cycle will be made compared to the "Cottons" program.

• **Darkcare**
Use this programme to wash your dark coloured laundry, or the coloured laundry that you do not want them get faded. This

programme washes your laundry with low mechanical movements and at low temperature. We recommend you to use liquid detergent or woolen shampoo for dark coloured laundry.

• **Daily Xpress**
This program is used to wash lightly soiled and unstained cotton garments in a short time.

• **Xpress Super Short**
You can use this program to quickly wash a small number of lightly soiled and unstained cotton garments. E.g.: bathrobes, duvet covers, sport wear, daily clothes and etc. used only once.

Economy Symbol
Shows energy saving programs and temperature selections.

As "Intensive" and "Baby" programs are long programs with higher temperature selections to ensure hygiene, "Economy" Symbol will not light up.

Special programs
For specific applications, you can select any of the following programs:

• **Rinse**
This program is used when you want to rinse or starch separately.
 • **Spin+Drain**
This program spins with maximum possible rpm in the default setting after the water drains from the machine.
 Use a lower spin speed for delicate laundries.

Temperature selection
Whenever a new program is selected, the temperature anticipated for that program appears on the temperature indicator. To change the temperature, press the "Temperature" button. Temperature decreases in 10° increments.
Cold selection is shown with "-°" symbol.

90°C	Heavily soiled, white cottons and linens.
60°C	Normally soiled, fade proof colored linens, cottons or synthetic clothes and lightly soiled white linens
40°C	Blended clothes including synthetics and woolens as well as delicates.
30°C	
Cold	

Spin Speed selection
Whenever a new program is selected, the maximum spin speed of the selected program is displayed on the spin speed indicator. To decrease the spin speed, press the "Spin" button. Spin speed decreases gradually. Then,

rinse hold and no spin options are shown respectively.
Rinse hold is shown with "L" and no spin is shown with "—" symbols.
If you do not want to unload your clothes immediately after the program, you may use the rinse hold function in order to prevent your clothes become wrinkled in an anhydrous condition. With this function, your laundry is kept in the final rinsing water. If you want to

spin your laundry after the rinse hold function:
 - Adjust the spin speed.
 - Press "Start/Pause/Cancel" button.
 Program resumes. Your machine drains the water and spins your laundry.
 You can use no spin function in order to drain the water without spinning at the end of the program.

consumption table

Program selection and

EN		Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Spin Speed (rpm)**	Auxiliary functions					Temperature	
	Cotton	90	5	63	1.80	1600	•	•	•	•	•	90-Cold
	Cotton	60**	5	61	0.90	1600	•	•	•	•	•	90-Cold
	Cotton	40	5	61	0.70	1600	•	•	•	•	•	90-Cold
	Intensive	60	5	61	1.35	1600	•	•	•	•	•	60-40
	Babycare	90	5	61	1.80	1600	•	•	•	•	•	90-30
	Synthetics	60	2.5	40	0.90	1000	•	•	•	•	•	60-Cold
	Synthetics	40	2.5	35	0.40	1000	•	•	•	•	•	60-Cold
	Mix	40	3	35	0.45	1000	•	•	•	•	•	40-Cold
	Darkcare	40	2.5	55	0.45	1000	•	•	•	•	•	40-Cold
	Woolen	40	1.5	40	0.30	1000	•	•	•	•	•	40-Cold
	Hand wash	30	1	30	0.20	1000	•	•	•	•	•	30-Cold
	Xpress Super Short	30	2	30	0.10	1400	•	•	•	•	•	30-Cold
	Daily Xpress	90	5	50	2.00	1400	•	•	•	•	•	90-Cold
	Daily Xpress	60	5	50	1.20	1400	•	•	•	•	•	90-Cold
	Daily Xpress	30	5	60	0.25	1400	•	•	•	•	•	90-Cold

** Energy & Water labelling test programme according to AS/NZS 2040.1

• Selectable
 • Automatically selected, not cancelable.
 *** If maximum spin speed of your machine is lower, selection may be made until maximum spin speed.

Water and power consumption and programme duration may differ from the table shown, subject to changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions, and fluctuations in the supply voltage.

The auxiliary functions in the table may differ according to the model of your machine.

Programme duration will be displayed on the screen of your machine according to your selection.