

## Cautions for usage

- The more food is put in the refrigerator or the more frequent and the longer the doors are opened, the more the electric consumption will be, ultimately even leading to malfunction.
- It is better not to place objects which are too heavy, pointed or are corrosive on the refrigerator.
- Only replug the electric power after an interval of over ten minutes.
- Do not store bottled drink in the freezer, so as to prevent them from exploding.
- Open the doors as less as possible during power supply breakdown.
- Do not touch food or containers in the interior compartment with your wet hands so as to prevent frost.

## Maintenance

- While cleaning the refrigerator, pull out the electric power plug, rub carefully with a piece of cloth soaked with natural cleanser then wipe with clean water.
- Cleansers such as soap powder, abrasive cleaning powder, alkali cleansers, chemical cloth, thinner, alcohol, acid petroleum product and hot water should not be used to clean the refrigerator as they may damage the painted cover and plastics.
- The drain pan should be cleaned at least once a year.
- If the refrigerator is out of use for a long time, please pull out the plug, clean and dry the interior compartment, then close the doors tightly.
- As the door gasket easily fogs and develops a build up of dirt overtime, clean it frequently.

## Troubleshooting

Situation	Inspection
Not refrigerating	<p>Check if there is a power failure</p> <p>Check if the power cord is plugged into the power outlet</p> <p>Check that the fuse (or circuit breaker) has not blown</p>
Not cooling correctly	<p>The food may be packed too tight together which blocks the flow of cool air.</p> <p>You may have put in something hot or a lot of food into the refrigerator.</p> <p>The temperature control dial may not have been set properly.</p> <p>The door may not have been closed properly.</p> <p>The door gasket may be damaged.</p> <p>The refrigerator may not be well ventilated.</p> <p>There may be insufficient space between the refrigerator and the surfaces immediate to the sides and top.</p>
Food freezes in the refrigerator compartment	<p>Have the temperature controls of the compartment been set to position "7" ?</p> <p>Is the normal surrounding temperature below 5 ?</p> <p>Have the food been placed too close together?</p>
Water leaks from refrigerator compartment	<p>Is the drainage pipe blocked ?</p> <p>Are there any leakages from some of the objects stored in it?</p>
Noises	<p>Is the refrigerator installed firmly?</p> <p>Has the refrigerator been struck by some other objects?</p>
Compressor does not stop working automatically	<p>Is there too much food stored at the one time?</p> <p>Are the doors opened too frequently or too long?</p> <p>Are the temperature controls of the freezer and refrigerator compartments set to "colder" position?</p>

If the above methods do not solve the problem, please contact the service After Sales Support.

*Faint, illegible text, likely bleed-through from the reverse side of the page.*