 


# NINTAUS

 
## *Operating Instructions*

### **DVD-N9808**

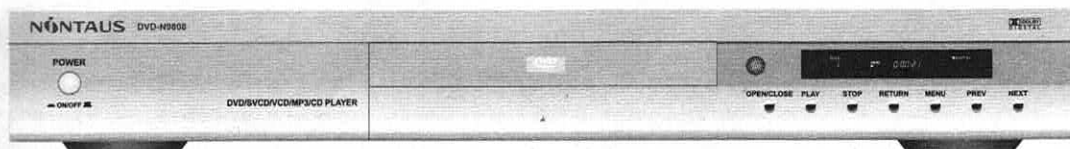

Before attempting to connect, operate or adjust this player  
please read this instructions completely and save for future reference.

## REMOTE CONTROL: GUIDE

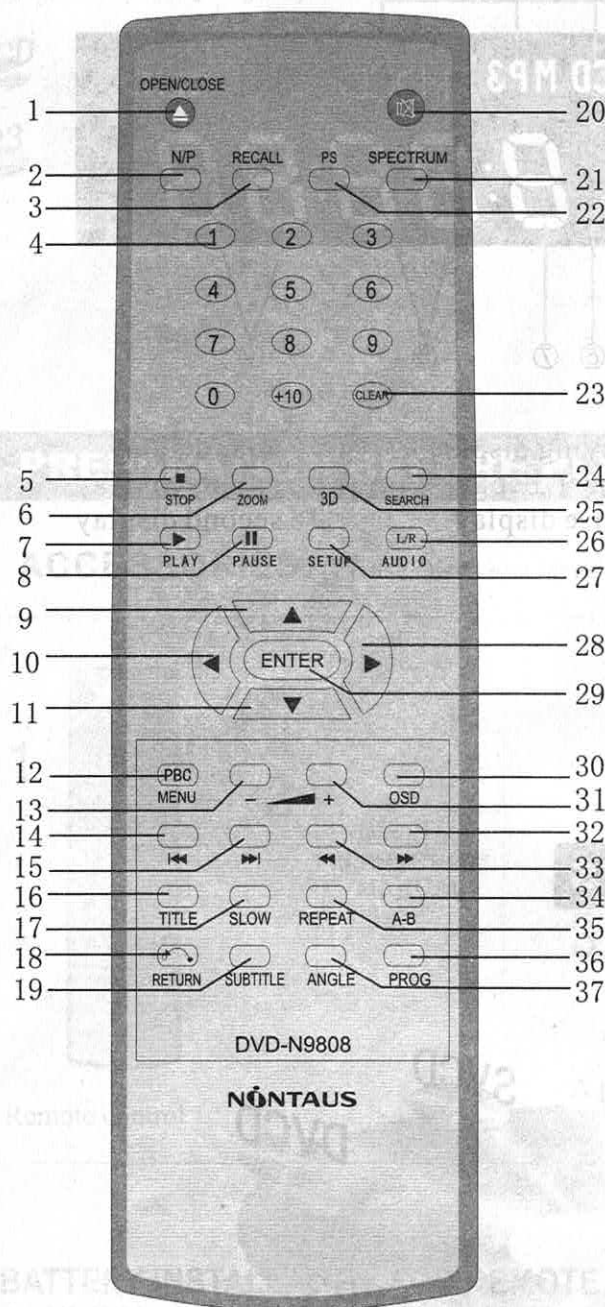


- 1.OPEN/CLOSE button
- 2.NTSC/PAL button
- 3.RECALL button
- 4.NUMBER button
- 5.STOP button
- 6.ZOOM button
- 7.PLAY button
- 8.PAUSE button
- 9.UP button
- 10.LEFT button
- 11.DOWN button
- 12.MENU (PBC) button
- 13.VOLUME control (-)
- 14.PREV. button
- 15.NEXT button
- 16.TITLE button
- 17.SLOW MOTION button
- 18.RETURN button
- 19.SUBTITLE button
- 20.MUTE button
- 21.SPECTRUM button
- 22.PROGRESSIVE button
- 23.CLEAR button
- 24.SEARCH button
- 25.3D
- 26.AUDIO button
- 27.SETUP button
- 28.RIGHT button
- 29.SELECT button
- 30.OSD button
- 31.VOLUME control (+)
- 32.FAST FORWARD button
- 33.FAST REWIND button
- 34.A-B REPEAT button
- 35.REPEAT button
- 36.PROGRAM button
- 37.ANGEL button


## Turn on the player

 1. Press "POWER" button to switch on the power then it will load disc as illustrated in the right side.

**Note:** Turn the volume of amplifier to the minimum if this player has been connected with the amplifier, then turn the amplifier power on and switch input channel into DVD.

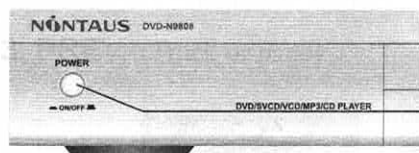

POWER

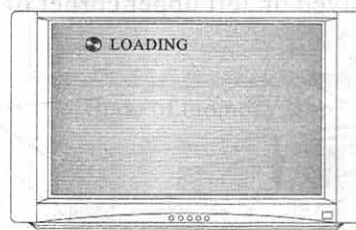 

← Loading



 
 
← No disc

**Note:** If no opening picture or no color when turning on the player, please press "NTSC/PAL" button on the remote control, adjust the whole player output mode to accord with TV system. Or press PROGRESSIVE button to set the video output to proper mode, see 7.3 for detail.

2. Press "OPEN/CLOSE" button on the remote control or on the player.




OPEN/CLOSE

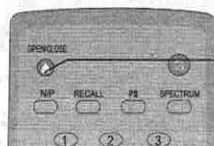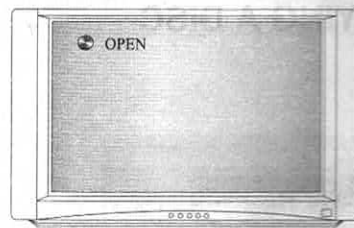

OPEN/CLOSE



 
3. Place a disc into the disc tray and then press "OPEN/CLOSE" button on the remote control or on the player to close the disc tray. The player can automatically discern different kinds of discs, and disc information may be displayed on left upper corner of TV screen.

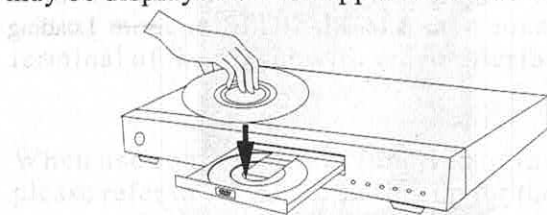

Type of disc →



 OPEN/CLOSE




OPEN/CLOSE



**Note:** Disc tray shall be opened/ closed by pressing the OPEN/CLOSE button after power on. Do not push or pull the tray by force so as to avoid damage to the appliance.

 4. After loading, the disc will be played automatically, or press buttons for other operation.

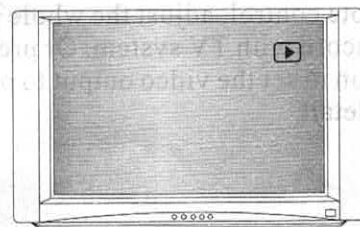

## Turn Off

 
Press "OPEN/CLOSE" button on the remote control or the player to open the disc tray, take the disc out, close the disc tray, and then press POWER button to turn off the player.

## 5.1 PLAYING A DISC


### 1. PLAY



PLAY




PLAY

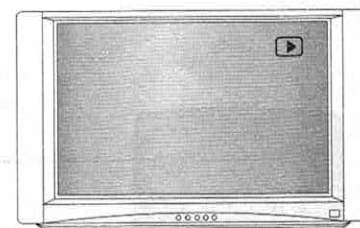 



## 2. STOP


 
Press "STOP" button once, the player enters memory-stop state; press again, the player will completely stop.

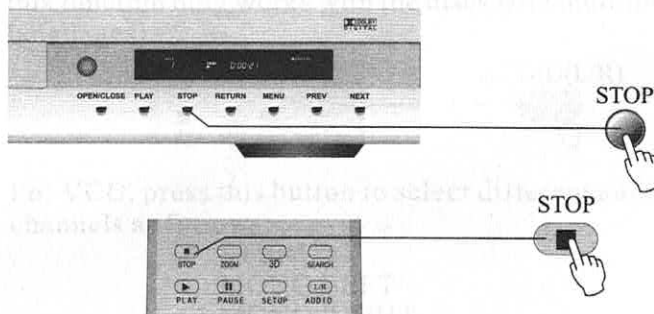


State of memory stop



## 3. PREV (Track or page)

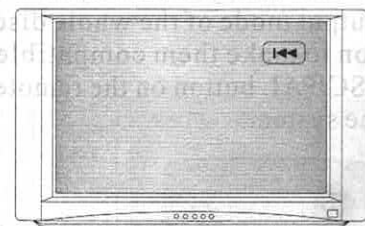 
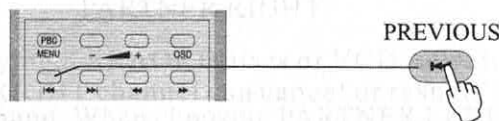 


## 4. NEXT (Track or page)


 


**Note:** Some discs do not support the functions described in item 3 and 4 above.

## 5. MENU

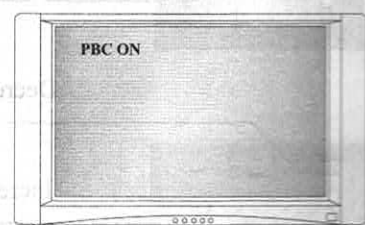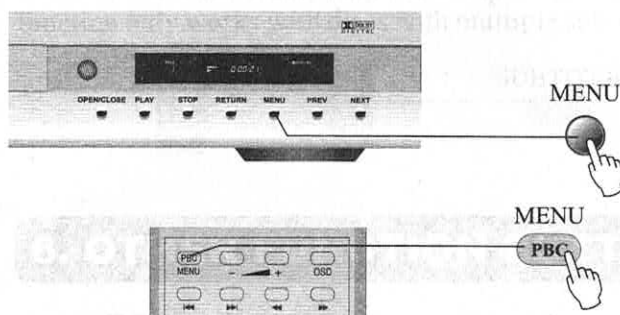  

## 6. RETURN

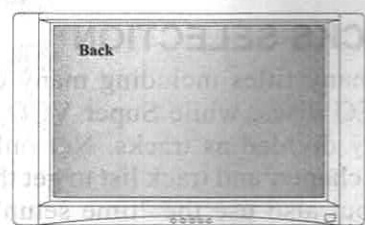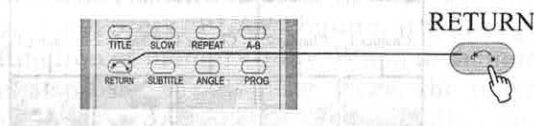  

## 5.2 NTSC/PAL SYSTEM

Continuously press NTSC/PAL button on the remote control to switch the following systems. Adjust the disc player output mode to match the TV system.

# NONTAUS

MULTI  
NTSC  
PAL

 
## Note:

1. This player has the function of automatically discerning disc format, and is defaulted as PAL system. If play discs in NTSC format, the player can automatically switch into NTSC system. At this time, it is normal that the picture will be instantly flashed.
2. If the picture is not the colorful picture or the color is abnormal, or the sound and pictures are temporarily interrupted, which may be caused by the discrepancy between the disc format and TV system, at this time, you can adjust TV system or picture output mode of the whole disc player by this option to make them compatible. Directly press NTSC/PAL button on the remote control to change the system.



## 5.3 MUTE & VOLUME CONTROL


Press "MUTE" button on the remote control to turn off sound and press again to turn on the sound. "-/+" button is volume control button and press "+" to increase volume and "-" to decrease volume.

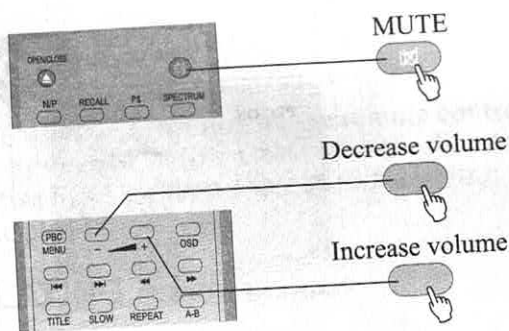

**Note:** Volume control is invalid for coaxial output.

## 5.4 TRACKS SELECTION

 There are many titles including many chapters in DVD VIDEO discs, while Super VCD, VCD and CD are only divided as tracks. Not only can you use its title, chapter and track list to get the program you want, but also use the "time setup" function. Refer to "9/ How to use search function" for details.

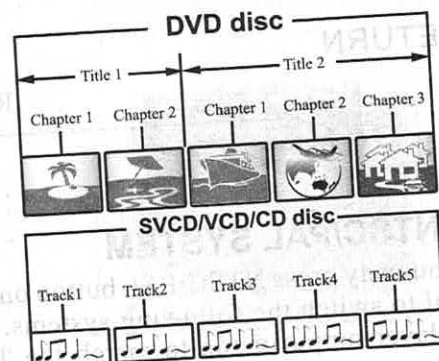

## 5.5 AUDIO CHANNEL (L/R)

Press AUDIO button on the remote control to select different dubbing languages (There are at most 8 kinds of languages for DVD discs and 4 kinds for Super VCD, this function only works with the discs with multiple languages).



 
For VCD, press this button to select different audio channels as follows:

STEREO  
MONO LEFT  
MONO RIGHT  
mix-MONO  
PARTNER LEFT  
PARTNER RIGHT

When playing KARAOKE discs of VCD, selecting LEFT or RIGHT channel can cancel or resume the original sound. When choosing PARTNER LEFT or PARTNER RIGHT, AUTO REPLACE function (When you are singing, the unit doesn't sing and when you are not singing, the unit continues to sing) and AUTO FOLLOW function (When you are singing, the unit also sings and when you are not singing, the unit stop singing, either.) will be activated.

## 5.6 SUBTITLE SELECTION





Press SUBTITLE button on the remote control to choose different subtitles (There are at most 32 kinds of subtitles for DVD and 4 kinds for Super VCD, this function only works with discs with multiple subtitles).



## 6. OTHER FUNCTION BUTTONS

### 6.1 STOP

    DVD player will be in the state of memory-stop automatically when you press "STOP" button. In this state, if you press "PLAY" button, it will implement the function of memory-play. When in memory-stop state, if press "STOP" once more, the player will completely stop and the memory-play function disappear.

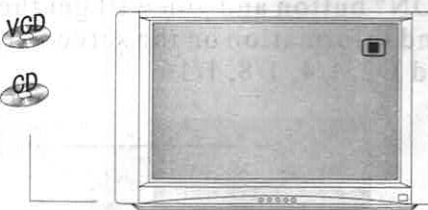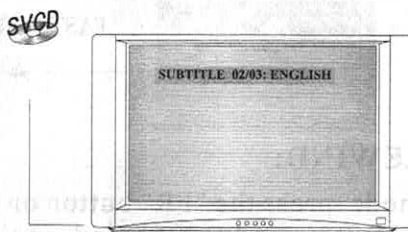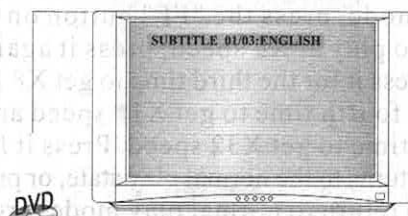

## 12. INTELLIGENT SCREEN PROTECTION AND STAND-BY FUNCTION

With the same function of screen protection and stand-by function as computer, it will automatically enter into screen protection after three minutes under stop or no disc state, so as to protect your TV screen. It will automatically enter into stand-by status after twenty minutes of screen protection, then DVD display is not light, video has no output, power consumption of the appliance is largely reduced, so as to enhance the safety and prolong lifespan. In stand-by state, press "PLAY" or "OPEN/CLOSE" button on the front panel of DVD and make it into normal working states.

## 13. MALFUNCTION & TROUBLESHOOTING

Before requesting after-sale service, try the following method to solve your problems.

### No sound:

- \* Ensure that the player is properly connected with other systems, such as power amplifier or TV set.
- \* Ensure that TV set or power amplifier is working properly.
- \* Check if MUTE button of the appliance or TV set is pressed.
- \* Check whether volume of the TV set or player is adjusted to minimum.

### No picture:

- \* Ensure that the player is connected firmly with the other system, such as TV set.
- \* Ensure that the TV set is working properly.
- \* Ensure that the video output mode is set properly (Refer to 4.3).

### Disc not playing

- \* Ensure that the disc is placed correctly. (The label side is facing up.)
- \* Ensure that the disc is clean.

### Microphone has no sound:

- \* Adjust the volume of the microphone to proper level.

### Remote control does not work:

- \* Remove the obstacles between the player and the remote control.
- \* Point the remote control at the sensor on the front panel of the player.
- \* Check whether the energy of the battery is adequate.

### No display or partial display:

- \* Check whether the disc is scratched and ensure that the disc is clean.
- \* When there is a trouble, please turn off the power because the appliance is controlled by microcomputer, and turn on the player again after several seconds. If the trouble is resolved, the player may work properly again.

### No output after turning on the player:

- \* Ensure that the time interval between continuous turning-on is not too short.
- \* Turn off the disc player, and turn on again after 10 seconds.
- \* Ensure that the video output mode is properly set. (Refer to 4.3 for details)

### Screen is not light and no output

- \* The appliance may enter the stand-by state. Press the "PLAY" or "OPEN/CLOSE" button on the panel to activate it.
- \* Switch off the power supply of the appliance, and turn it on after 10 seconds.