 


Palsonic

**60cm(23.6") LCD TV WITH
DVD & DVB-T**

 
**INSTRUCTION MANUAL
TFTV6042FHD**

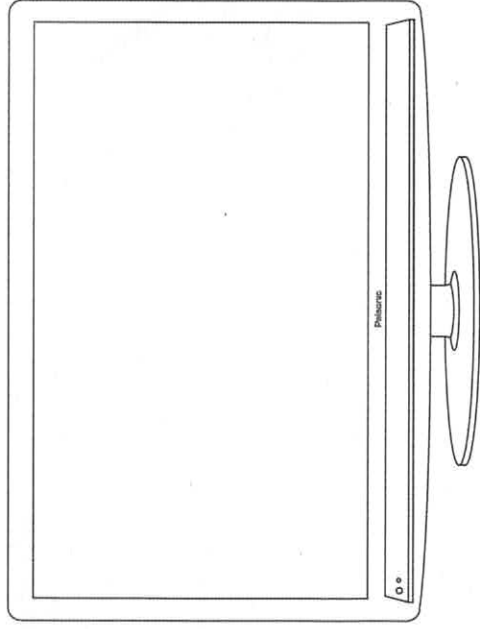

Remote Control

● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.

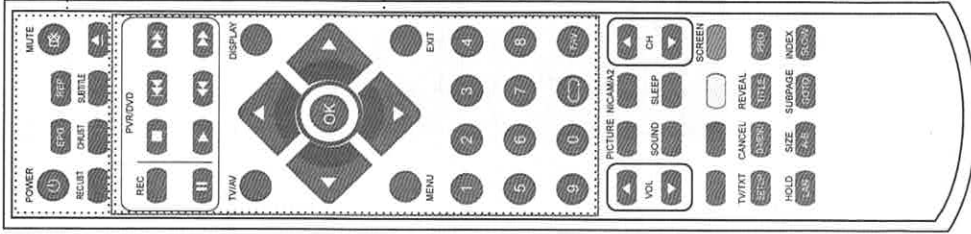

POWER: Turn the TV on/standby.
MUTE: Press to mute the sound, press again or press VOL+ to unmute.
REC LIST: Record List.
CH/LIST: Display the programs list.
SUBTITLE: Turn on/off the subtitle display in DTV mode and DVD mode.
EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.
REP: Repeat playing the title or chapter.
▲: Load/eject DVD disc.

PVR/DVD
REC : Press to start record the program in DTV mode.
 ■ : Stop program.
 ◀▶ : Previous chapter.
 ▶▶ : Next chapter.
 || : Pause program.
 ▶ : Play program.
 ◀◀ : Fast reverse.
 ▶▶ : Fast forward.

 
TV/AV: Press to display the input source menu.
DISPLAY: Press to display the current mode's information.
MENU: System setup menu.
EXIT: Exit the OSD menu.
FAV: Display the favorite program list.

NUMBER BUTTONS
 Press 0 to select a TV channel directly when you are watching TV.



Return to the previous channel viewed.
CURSOR KEYS (▲/▼/◀/▶/OK)
 Allows you to navigate the on-screen menus and adjust the system settings to your preference.

Remote Control

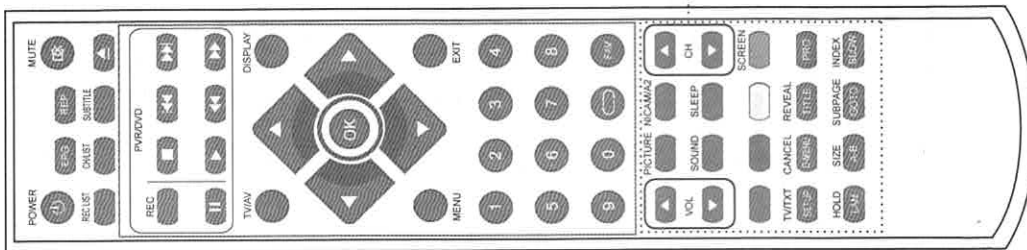

- CH▲▼: Scan through channels.
 VOL▲▼: Adjust the volume.
 PICTURE: Select the picture mode.
 NICAM/A2: TV Nicam/A2 select.
 SOUND: Select the sound mode.
 SLEEP: Standby timer.
 SCREEN: Turn on/off the screen.
 TWTXT: Turn off/on the Teletext display.
 CANCEL: Cancel the Teletext display.
 REVEAL: Reveal any hidden text.
 HOLD: Hold or carry on the current subpage.
 SIZE: Press to see top half of page double size, Press again to see the bottom half of page double size. Press again for normal size.
 SUBPAGE: Press to enter subpages, press again to cancel.
 INDEX: Go to index.
 Colour buttons: Short cuts follow the coloured links in the text
- SETUP: DVD system setup.
 D-MENU/DVD play list/Disc menu.
 TITLE: DVD title.
 PRO: Edit the program and play.
 LAN: Select DVD disc language.
 A-B: Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.
 GOTO: Play your favorite title/chapter/track.
 SLOW: Play DVD programs at slow speed.

Basic Operation

 
Power on/off

1. Connect to the power supply with a power cord, and turn on the power by the SWITCH.
2. -To turn on the TV
 Press **POWER** button on the TV or remote control.
 -To turn off the TV
 Press **POWER** button on the TV or remote control.

Input Source select

Press **TV/AV** button on the TV set or remote control to display input source menu, and use **CH+/-** button on the TV set or **▲/▼** button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are made correctly.

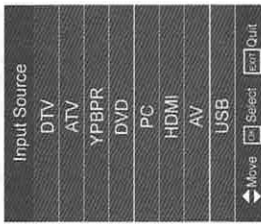

Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:





Hint—you should operate the OSD menu according to the hint.

Use **</>** button to select the main menu, and press **▼** button to enter the submenu. In the submenu, use **▲/▼** button to select the function item, press **</>** button to adjust/setup, or press **OK** button to enter the submenu.
 * (Press **MENU** button to return to the upper menu.)
 * (Press **EXIT** button to exit the menu display.)


Note1: Only when you input the suitable signal, the relevant items can be activated
Note2: The OSD menu controls vary - see hints at the bottom of the screen.

  DVD Operation

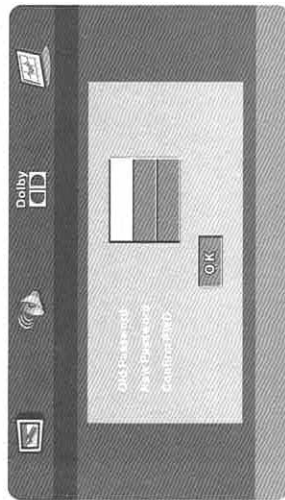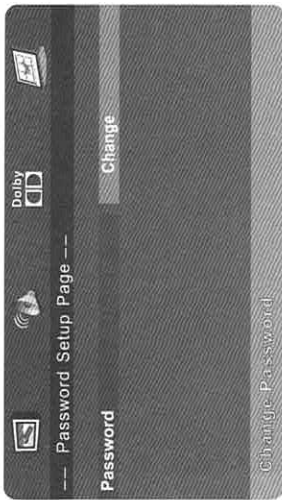

Default

 User can load the original factory setting by choose RESET and press OK button.

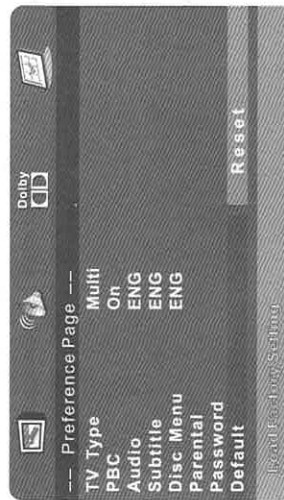

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals topoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

No power

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

No picture or sound

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

Poor picture quality

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, colour, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

TV does not respond to remote control

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.