



How to Use and Care for your Washing Machine

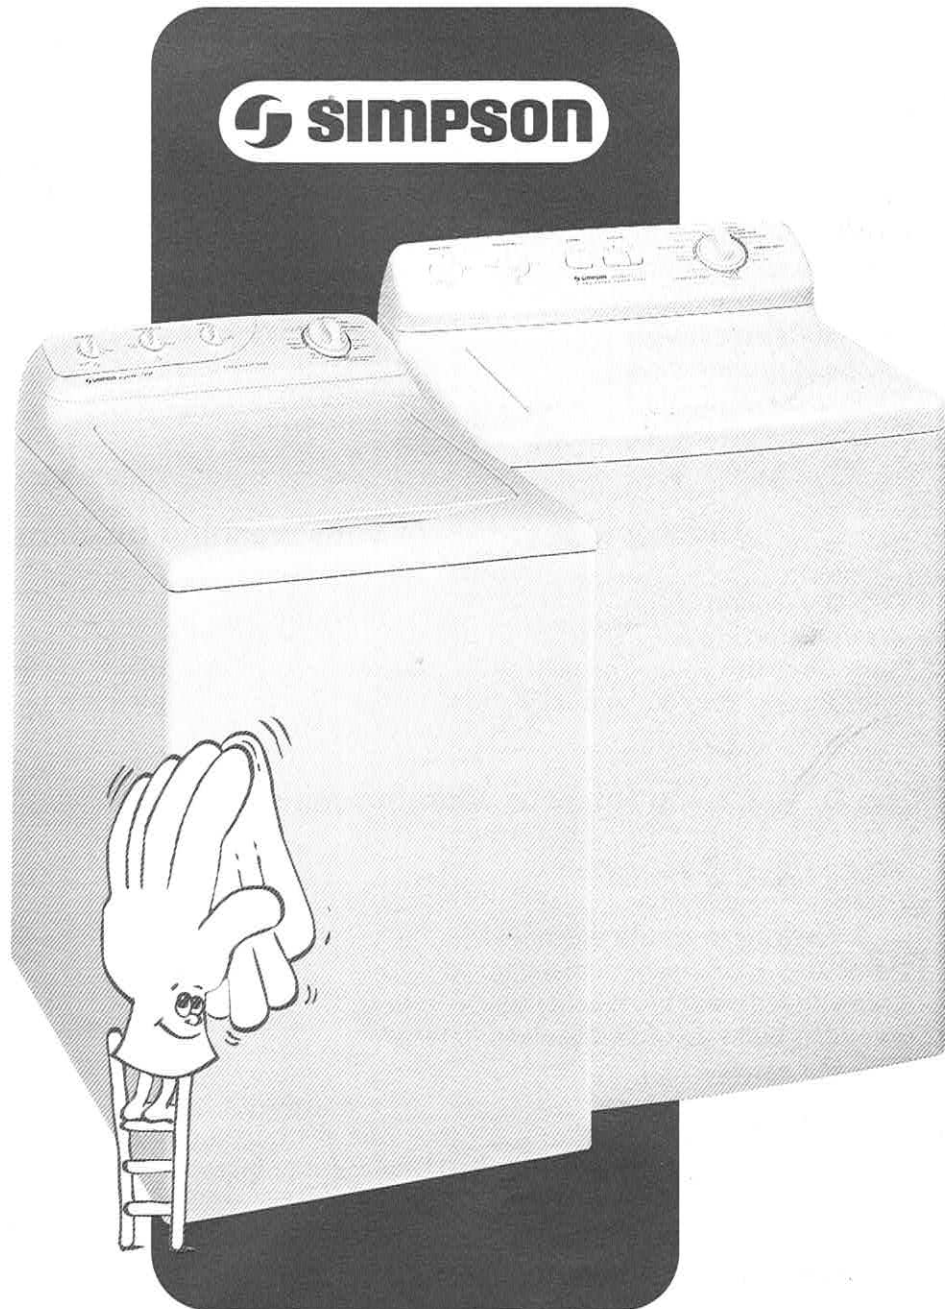

Choose the wash programme

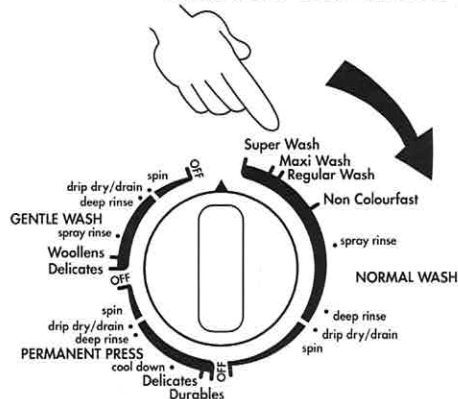

When you are choosing the wash programme, PUSH the knob in, and then turn it CLOCKWISE.

PULL the knob out to start the washing machine.

IMPORTANT: Do not turn the knob anticlockwise
Do not turn the knob while the washing machine is operating.

The different wash programmes are explained below.
Some of the wash programmes are not available on all washing machines.
Check the control panel layouts in the first section of this booklet.

Wash Programme Cycle times depend on water pressure and water level selected	Recommended water temperature	Using the programme	Wash Action (Where fitted)
PREWASH Only some machines	Hot or warm	<ul style="list-style-type: none"> Select this programme for very dirty laundry. The washing machine will start a wash cycle and then stop to allow soaking. Select another wash cycle to continue washing. (eg Regular wash) 	Regular
SUPERWASH Approx. cycle time 53-60 mins. Only some machines	Hot or warm	<ul style="list-style-type: none"> Select this programme for very dirty laundry. The washing machine will stop for 4 to 6 minutes to soak the load and then it will continue through the cycle. 	Regular
MAXIWASH Approx. cycle time 44-52 mins. Only some machines	Hot or warm	<ul style="list-style-type: none"> Select this programme for a normally soiled cotton wash load. <p>NOTE: Select the required wash time according to the degree of soil in the clothes.</p>	Regular
REGULAR Approx. cycle time 38-46 mins.	Hot or warm	<ul style="list-style-type: none"> Select this programme for an average domestic wash of mixed fabrics. 	Regular
NON COLOURFAST Approx. cycle time 29-34 mins. Only some machines	Cold	<ul style="list-style-type: none"> Select this programme for non colourfast items. 	Regular
PERMANENT PRESS Durables Approx. cycle time 22-27 mins. Only some machines	Warm	<ul style="list-style-type: none"> Select this programme for permanent press clothes, eg polyester shirts, skirts and trousers. 	Gentle
PERMANENT PRESS Delicates Approx. cycle time 19-23 mins. Only some machines	Warm	<ul style="list-style-type: none"> Select this programme for permanent press Ladies nighties, blouses etc. 	Gentle
DELICATES Approx. cycle time 17-23 mins.	Warm	<ul style="list-style-type: none"> Select this programme for lingerie, lace trimmed and embroidered items. 	Gentle
WOOLLENS Approx. cycle time 15-19 mins.	Wool	<ul style="list-style-type: none"> Select this programme for woollen clothes. Only wash woollen fabrics which are labelled <i>Machine Washable</i>. 	Gentle

Section F Don't call for service until you've checked these points

IMPORTANT: If you call for service and there is nothing wrong with your washing machine, you will have to pay for the service call. You will have to pay even when your washing machine is under warranty.

Before you call for service, check the points in the table below.

Problem	Possible causes	What to do
Washing machine not working.	<ul style="list-style-type: none"> • Power not switched on • No electricity supply through the power point • Water taps not turned on • Out of balance switch off • Machine not switched on 	<ul style="list-style-type: none"> • Switch on power point • Check power point with another appliance • Turn on taps • Open lid, redistribute load and close lid. • Pull timer knob out
Washing machine has washed load but will not spin. Water in washbowl.	<ul style="list-style-type: none"> • Option button set on DRIP DRY • REBALANCE light is on • Option button set on WASH & SOAK 	<ul style="list-style-type: none"> • Set option button to NORMAL • Open lid, redistribute load and close lid. • Set option button to NORMAL
Washing machine will not fill with water.	<ul style="list-style-type: none"> • Water taps not turned on • Inlet hoses blocked • Programme not at start of wash programme 	<ul style="list-style-type: none"> • Turn taps on • Clean tap filters / washers • Turn programme knob to start of wash cycle
Washing machine goes out of balance or vibrates when spinning.	<ul style="list-style-type: none"> • Machine not level • Levelling feet not adjusted • Clothes not evenly distributed • Too much water for load size 	<ul style="list-style-type: none"> • Make the machine level • Adjust feet to touch the floor • Redistribute clothes evenly • Reduce water level
Water on floor	<ul style="list-style-type: none"> • Loose inlet hose connections • Incorrect water level for size of load • Condensation from hot water • Spin cycle selected before water pumped out 	<ul style="list-style-type: none"> • Check connections at taps and rear of machine • Use low water level for small loads • Reduce water temperature • Select DRAIN before spin cycle
Clothes still dirty after wash programme.	<ul style="list-style-type: none"> • Not enough or no detergent • Too many clothes in load • Incorrect wash programme or temperature selected • Incorrect water level selected • Wash action set on Gentle 	<ul style="list-style-type: none"> • Check detergent use and rewash clothes • Remove some clothes and rewash • Reselect programme or temperature • Use a higher water level and rewash clothes • Select Regular wash action (where fitted)
Scraping noise on spin.	<ul style="list-style-type: none"> • Bra wire caught between inner and outer washbowls 	<ul style="list-style-type: none"> • If bra wire visible, remove with pliers • Use a wash bag in future
Humming, clicking and banging noises.	<ul style="list-style-type: none"> • Rotational spin at start of wash • Brake lever release and retract noise when lid is opened during spin cycle 	<ul style="list-style-type: none"> • Normal noise • Normal noise
Water flowing into washbowl indefinitely.	<ul style="list-style-type: none"> • Drain hose too low 	<ul style="list-style-type: none"> • Raise drain hose • Fit a syphon break
Saved water will not return (where fitted).	<ul style="list-style-type: none"> • Air in drain hose • Drain hose blocked • Have not selected suds return 	<ul style="list-style-type: none"> • Repeat the suds return programme Make sure both taps are on • Check drain hose for kinks or blockage • Turn programme knob to suds return

Should you require further instructions in the use and care of your washing machine please contact the CUSTOMER CARE CENTRE on the phone number listed:

Australia 1300 363 640 8am to 5pm EST Monday to Friday.

New Zealand (09) 573 2384 8am to 5pm Monday to Friday.

If you have a warranty or spare parts enquiry you should call the number shown on the back page.