

DVD Player
Instruction Manual


D100-AU

SONIQ

Preparations Before Operation


NAMES AND LAYOUT OF REMOTE CONTROLS

* After setting the mode by using SETUP menu (for example, NTSC select in NTSC /PAL/AUTO setup), the setting is kept though you switch the unit off and turn it on.

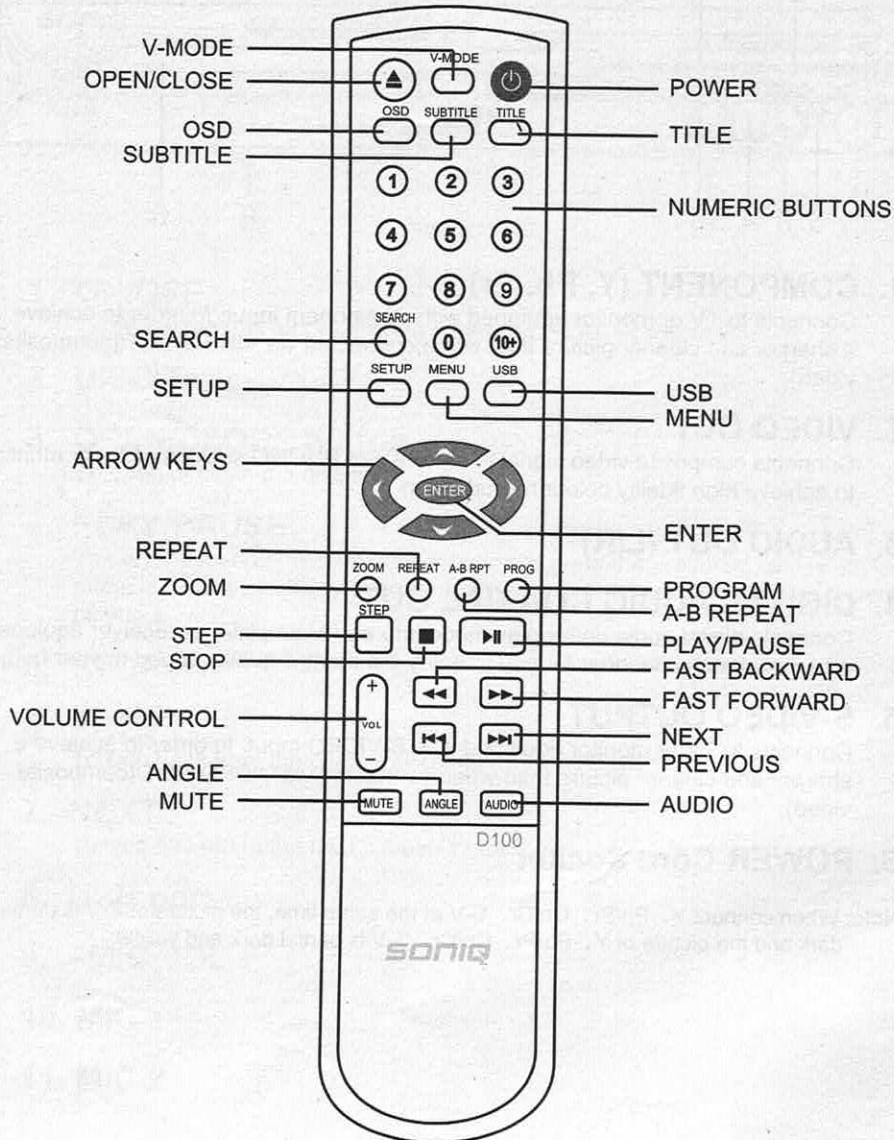

PLAY DISCS

1 Press "ON/OFF" button on the TV and audio system, Press "TV/VIDEO" button on the TV, select VIDEO mode (TV).

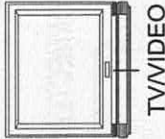

Select S-VIDEO mode if using an S-VIDEO connection.

2 Select the correct audio input on the amplifier.

- Each amplifier is different from another, please refer to the manual for the amplifier. (e.g., connect the audio output of the DVD player to the DVD audio input of an amplifier.)

Note:

The Step 2 can be cancelled if you do not connect it to the amplifier.

3 Press "ON/OFF" button on the front panel to turn the unit on.

4 Press "OPEN/CLOSE" button to open the disc tray and insert the disc with its label upward. Press "OPEN/CLOSE" button again to close the disc tray. The unit begins to read the disc. The TV screen shows the DVD menu and title menu.

- When playing a DVD, DVD menus and titles are displayed on TV screen.
- In the case of CD, the disc plays in order of its track number.

5 Stop playback.
Press ■.

6 Press OPEN/CLOSE to remove the disc.

MENU

During DVD playback, press this button, the unit will directly back to root menu.

OSD

During the playback, Press the OSD to show disc information, such as disc type, total chapter, current play chapter and so on.



FAST PLAY


When playing disc, you may play it forward fast or reverse it fast to find what you need.

Note:

Press PLAY to play normally when playing fast.

Note:

The marked FAST PLAY speed on owner's manual and real fast play speed can be different depending on which disc you play.

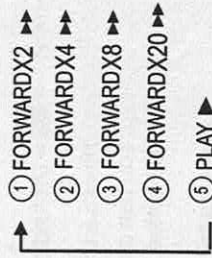

1 Press ►► to play forward fast. Each time you press the button, the speed of picture changes like the right sides.



2 Press ◀◀ to reverse the disc fast. Each time you press the button, the speed of picture changes like the right sides.



PLAY/PAUSE

Press the "PLAY/PAUSE" button during playback to pause playback.



Press **PLAY** to play normally.

SELECT AUDIO LANGUAGE

When playing a multi-language DVD, you can choose which language to playback in.

Press the "AUDIO" button, then select the language you would like for playback.



AUDIO

Note:

1. Different discs have different languages.
2. You can press the "AUDIO" button to choose the language you want when playing multi-language DVD discs.

Attention:

Please select the **AUDIO** language in the **SETUP** menu to keep the setting!!!

USB function supported

There is a USB button on the player.

You can choose among **USB**, **DISC** by pressing **USB** button.

- Select the **USB** item, you can enjoy the media files in the **USB** device.

USB



TO SKIP SCENES ON A DISC

1

Press **▶▶** to move to the next chapter (or track).
The current chapter (or track) moves to the next chapter (or track).

2

Press **◀◀** to move to previous chapter (or track).
The current chapter (or track) moves to the previous chapter (or track) or the first scene of the current chapter (or track).

DIRECTLY MOVING TO A DESIRED TITLE (DVD)

some movie discs may contain multiple titles. If the disc has a movie title menu recorded on it, the "TITLE" button can be used to select the movie title. Details of operation may differ depending on the disc used.

1

Press the "TITLE"
A list of the titles on the disc is displayed.



2

Press the "ENTER" button after pressing the "**◀▶▶▶**" or number buttons to select the desired title.

The selected title now starts playing.

TROUBLESHOOTING

If you experience the following problems while using this trouble shooting guide may be able to assist in resolving the issue.

- **NO SOUND**
 - Check if the player is connected securely.
 - Make sure you operate the TV or amplifier correctly.
- **NO IMAGE, IMAGE ROLLS AND NO COLOUR**
 - Check if the player is connected securely.
 - Make sure you operate the TV correctly.
 - Make sure you set the colour system correctly.
- **BAD SOUND QUALITY**
 - Make sure the audio output mode is set correctly.
 - Make sure the audio connection between the player amplifier is correct.
- **DISC CAN NOT BE PLAYED**
 - There is no disc in the player.
 - Insert the disc on the disc tray properly with the label side up.
 - Clean the disc.
 - Moisture has condensed in the player.
Remove the disc and leave the player. on for about one hour.
- **REMOTE CONTROL DOES NOT WORK**
 - Remove barriers between the remote control and the player.
 - Replace the batteries with new ones.
 - Point the remote control at the remote control sensor of the player.
- **MPEG 4 PLAYBACK**
 - During MPEG4 / Divx playback, the Display will show "MP4".
But this device supports MPEG4 but not the file name ".mp4".
In which ".MP4" is the video format used on cell phone.