


DVD PLAYER
Instruction Manual

D301-AU

SONIQ

Front Panel and Rear Panel


FRONT PANEL

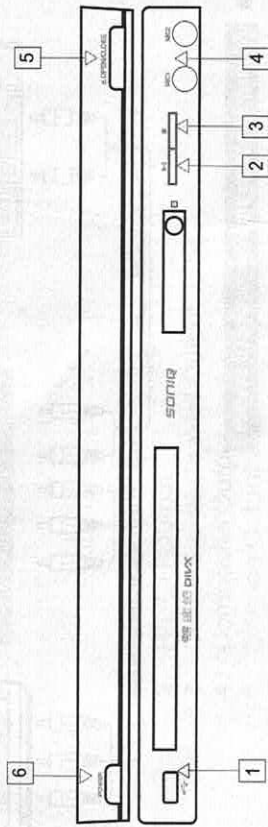

1. USB
2. PLAY/PAUSE
3. STOP
4. MIC
5. OPEN/CLOSE
6. POWER

Remote Control

REMOTE CONTROL

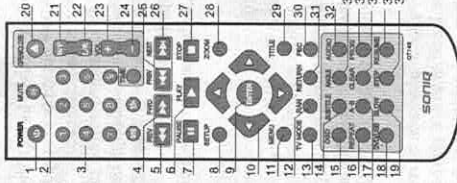

1. POWER
2. MUTE
3. 1-10+
4. FWD
5. REV
6. PLAY
7. PAUSE
8. SETUP
9. ENTER
10. UP/DOWN/LEFT/RIGHT
11. MENU
12. RAN
13. TV MODE
14. SUBTITLE
15. OSD
16. REPEAT
17. A-B
18. D/DOUBLE
19. SLOW
20. OPEN/CLOSE
21. N/P
22. L/R
23. VOL+
24. VOL-
25. PREV
26. NEXT
27. STOP
28. ZOOM
29. TITLE
30. PBC
31. RETURN
32. AUDIO
33. ANGLE
34. PROG
35. CLEAR
36. RESUME
37. STEP

Loading Batteries

1. Remove the battery compartment cover.



2. Insert batteries.



Make sure to match the + and - on the batteries to the marks inside the battery compartment.

3. Replace the battery compartment cover.




Notes on batteries

- Do not insert batteries into the remote control in the wrong direction.
- Do not change, heat, open, or short-circuit the batteries. Do not discard batteries into a fire.
- Do not use different types of batteries together or mix old and new batteries.
- If the remote control does not function correctly or if the operating range becomes affected replace all batteries with new ones.

Operating With The Remote Control



When using the remote control, the front window of the remote control should be pointed to the infrared sensor on the front panel within an angle of $\pm 30^\circ$ and a range of 8 meters.

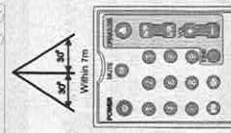

Notes on the remote control

- Direct the remote control at the remote sensor of the DVD player.
- Do not drop or subject the remote control to shock.
- Do not leave the remote control near extremely hot or humid places.
- Do not spill water or place anything wet on the remote control.
- Do not disassemble the remote control.

Basic Playback

Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the unit.

Basic Playback

1. Press **POWER** switch in the front panel to ON, the unit turns on and the TV screen will display the start logo. If a disc is already in the tray, it will begin to play once the power is switched on.
2. Press **△** OPEN/CLOSE to open the disc tray.
 - There are two different disc sizes. Place the disc in the correct guide on the disc tray; if the disc is out of the guide, it may damage the disc and cause the unit to malfunction.
 - Do not place unplayable disc in this unit.
3. Press **△** OPEN/CLOSE to close the disc tray; the playback will automatically begin.
 - Some discs may not playback automatically to press **ENTER** or **PLAY** ▶ button to start playback.
4. Some discs may begin playback with a menu. Use the cursor button on the remote controller to select menu options and press **ENTER** or **PLAY** to start, or press digits to select a menu options directly.

Pause

1. Press **Pause** to pause playback.
The sound will be muted during still mode.
2. Press **ENTER** or **PLAY** to resume normal playback.

Previous and Next

1. During Playback, press **PREV** ◀ key can back to previous chapter, then each press will skip a chapter till the start of the disc.
2. Each press of **NEXT** ▶ key during playing will skip the current chapter and play the next one.

Fast Forward and Fast Reverse

1. Press **FWD** ▶▶ to fast forward through the disc. Each time the **FWD** ▶▶ button is pressed, the fast forward motion speed changes.
2. Press **ENTER** or **PLAY** to resume normal playback.
3. Press **REV** ◀◀ to fast reverse through the disc. Each time the **REV** ◀◀ button is pressed, the fast reverse motion speed changes.
4. Press **ENTER** or **PLAY** to resume normal playback.

Stop Playback

1. Press **STOP** ■ button to playback stop mode, the TV screen will show the start logo. The last stopped disc location for certain DVDs and Audio CDs may be recalled.
2. Press **ENTER** or **PLAY** to playback or resume playback from the location where playback has stopped or from the beginning of the disc.
3. Press **STOP** twice to stop completely.

Slow

1. Press **SLOW** to play a disc in slow forward. Each time the **SLOW** button is pressed, the slow motion speed changes.
2. Press **ENTER** or **PLAY** to resume normal playback

NOTES: This function is not applicable for CD and MP3.

NOTES:

1. "INVALID KEY" may appear on the TV screen during operation.
"INVALID KEY" means that the operation is not permitted by the unit or the disc.
2. Under setting mode, there may be screen save, press any key to activate the unit; if you can not use this function, you can set **SCREEN SAVER** to **OFF** in **SYSTEM SETUP PAGE** of **SYSTEM SETUP**.

Advanced Playback

IMPORTANT NOTE:

THE FOLLOWING FUNCTION DESCRIPTIONS ARE FOR DVDS OPERATION AND DISPLAY ON SCREEN MAY BE DIFFERENT FOR OTHER DISC FORMATS.

TIME

Once the **TIME** button is pressed, the screen will display messages. Use the **LEFT/RIGHT** cursor button to select your preference. Press **ENTER** to confirm.

MENU

Press this button to display root menu, select item according to your preference. (This key is valid for DVDs with multi-layer menu.)

OSD

Press **OSD** button in succession, the screen will accordingly display "DVD TT XXXX CH XXXX @ 00:00:05 (chapter elapsed)", "1/3 ENG 5.1CH @ 1/4 ENG @ OFF", "DVD TT XXXX CH XXXX @ -00:00:00 (chapter remain)", "DVD TT XX CH XXXX @ 00:00:00 (title elapsed)", "DVD TT XXXX CH XXXX @ -00:00:00 (title remain)", the sixth will cancel function.

ANGLE

For discs with this feature, press this key to view action from different angles. (Depending on the DVDs)

NTSC/PAL

Press the **N/P** key to switch between **NTSC**, **PAL**-M and **AUTO**.

REPEAT

Press **REPEAT** several times to circle through **OFF**, **CHAPTER**, **TITLE** and **RECALL**.

SUBTITLE

Press this button and the screen will display: "[XX]", "XX" indicates the language of country. (the number of language depends on disc).

A-B REPEAT

Press **A-B** to begin start-point, press again to set an end point and complete setting. The selected section **A-B** will be repeated. The third press will cancel this function.

TITLE/PBC

For DVD discs - Press this button to display the title menu. Press the digits or navigation button to select your preferred chapter.
For SVCD and VCD - Press **PBC** to enter disc menu. Press digits or navigation button to select.

VOLUME AND MUTE

Press "+" at the **VOLUME** to increase volume, "-" to decrease volume. The first press **MUTE** will display Mute, the second press will return to normal.

TV MODE

Select the video output of your TV.

RETURN

As for a VCD/DVD disc, when the **PBC** is on, press this button to return to the track list menu.

Troubleshooting

Please check the following guide for the possible cause and solution for a problem before contacting the nearest service center or dealer for repairs.

POSSIBLE CAUSES AND SOLUTIONS

SYMPTOMS	SOLUTION
No power	Check to make sure that the power connection is secure.
No picture	Make sure the connection between the player and the TV is secure.
No sound	Make sure that the TV is in good working condition. Make sure the connection between the player and other devices are secure. Make sure that the TV and AMP are in good working condition and properly setup.
Failure to play	Check that the disc is properly inserted. Clean the disc. Remove obstacles between remote control and unit.
Failure to respond to remote control	Aim remote control at the sensor on the front panel Check batteries and replace them if necessary.
Picture Disturbance	Check the disc for dirt and scratches. Clean or replace disc. Shut down the unit, wait ten seconds, and restart the unit.
Failure to work with keys	Power surges or brown outs or other electrical phenomena. Shut down the unit, wait ten seconds, and restart the unit.

System Setup

5.4 REAR DELAY

REAR DELAY : This can set rear time delay according to your preference.



5.5 FRONT

FRONT: This can set Front L/R to large and small.



6 DIGITAL SETUP PAGE



6.1 DYNAMIC RANGE

DYNAMIC RANGE : When LINE OUT is selected, choose this setting to adjust the line out ratio for different effect. If adjusting to FULL, the audio signal peak value will be the minimum.



6.2 DUAL MONO

DUAL MONO: If your amplifier/decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.



USB

As additional memory for software updates and BD-Live bonus contents.

Follow the steps below to copy the music file on Mp3 disc to USB device.

- (1) Put the disc into the disc tray and insert USB device.
- (2) After its reading, press SUBTITLE button on remote control, then the selected music file will be copied to USB device.

Follow the steps below to copy the music file on CD disc to USB device.

- (1) Open the door into CD disc, and insert a U disk;
- (2) After reading, press SUBTITLE button on remote control, a operation menu will pop up;
- (3) Move the cursor to TRACKS, select a music file on the right side and press ENTER to confirm;
- (4) Move the cursor to START and press ENTER, then enter copy state;
- (5) In copy state, CHANGE SPEED on the bottom right can adjust the speed;
- (6) When copy is completed, press EXIT to quit.