

**Qvision**  
LCD TV

 
# *Instruction Manual*

L26V10A-AU

**SONIQ**


## REMOTE CONTROLLER

1. **POWER** : Sets your TV to power on or standby mode.
2. **MUTE** : Press to mute the sound. Press again or press VOL+ to unmute.
3. **0-9**: Press 0-9 to select a TV channel directly while watching TV. The channel will change after 2 seconds. Antenna cable for enter in page number in teletext mode and soon.
4. **ATV/DTV**: Enters ATV and DTV channel directly.
5. **↶** : Return to the previous viewed program.
6. **S.MODE**: Press to cycle through the different sound settings
7. **SLEEP** : Select amount of time before TV turn itself off automatically.
8. **MTS** : Press to search the NICAM modes.
9. **P.MODE** : Press to cycle through the different picture settings
10. **MENU** : Allow you to navigate the on-screen menus.
11. **SOURCE**: Open the main menu ,press to list the sources  
12/13/14/15. **▲▼◀▶** Enter Allow you to navigate the on-screen menus and adjust the system settings to your preference.
16. **DISPLAY**: Press to display the source and channel's info.
17. **EXIT**: Exit from the menu or sub-menu and cancel the function in process (if applicable)

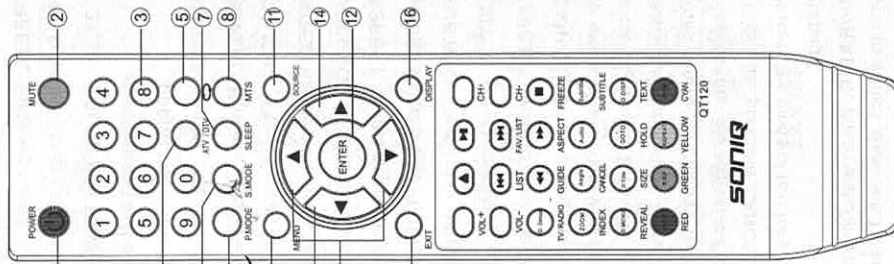
**Battery Installation:**

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Replace the battery compartment lid. Slide the lid until you hear it click into place.

 18. **TEXT:** Switch On or Off the TELETEXT mode.
19. **FREEZE:** Picture paused.
20. **HOLD:** HOLD On or Off for current page display.
21. 22. 23. 24. **COLOR BUTTONS:**  
Correspond to the coloured operations within the menus.
25. **SIZE:** Change the size of display in Teletext mode.
26. **REVEAL:** Reveal or Hide the hidden words.
27. **CH+/CH-:** Press to scan through channels.
28. **INDEX:** Request the Index page in Teletext mode.
29. **VOL+VOL-:** Press to increase / decrease the sound level.
30. **ASPECT:** Select picture scale.
31. **GUIDE:** Launches the EPG (Electronic Program Guide)
32. **SUBTITLE:** To display subtitle in TV mode.
33. **LIST:** To enter program list.
34. **FAV/LIST:** press to open the favorite list.
35. **CANCEL:** When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found, the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page.
36. **TV/RADIO:** When watching channel, allows you to switch Between TV and Radio modes.

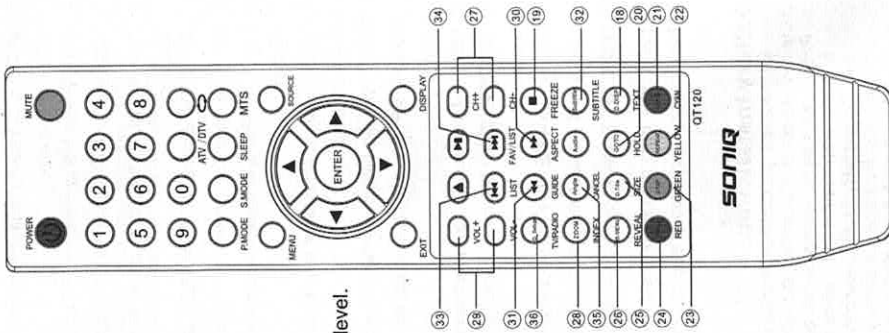

37. **A-B** Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and of it.
- 38/39/40/41/42. **▲ ▼ ◀ ▶ ENTER**  
When the DVD menu or system menu display on the TV screen and wait for selection, press these buttons to select an item in a menu. Moves an enlarged picture up/down/left/right.
43. **▲** DVD eject
44. **▶▶** Play/Pause DVD program.
45. **▶▶▶** DVD next chapter.
46. **◀◀◀** DVD previous chapter.
47. **◀◀** DVD fast reverse.
48. **▶▶** DVD fast forward.
49. **■** Stop DVD program.
50. **SETUP** DVD system setup.
51. **GOTO** Play your favorite title/chapter/track.
52. **PROG**  
Press this button to change the playback order. It varies according to the different discs.
53. **ZOOM** The zoom Function allows you to enlarge or zoom out the video image and to pan through the image. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1/2, Zoom 1/3, Zoom 1/4, Zoom off.
54. **D.DISP**  
Press to display the source and channel info.
55. **SUBTITLE** Select DVD disc language.
56. **AUDIO** Select DVD disc language.
57. **ANGLE** Select DVD picture angle.
58. **D.MENU** DVD disc menu, press this to access the menu.
59. **REPEAT** Repeat playing the title or chapter.
60. **D.TITLE** Press to select the DVD title.
61. **STEP** Every press on this key at PLAY mode, one frame will be advanced and then the image on screen will pause, to return to normal play mode simply press PLAY key.

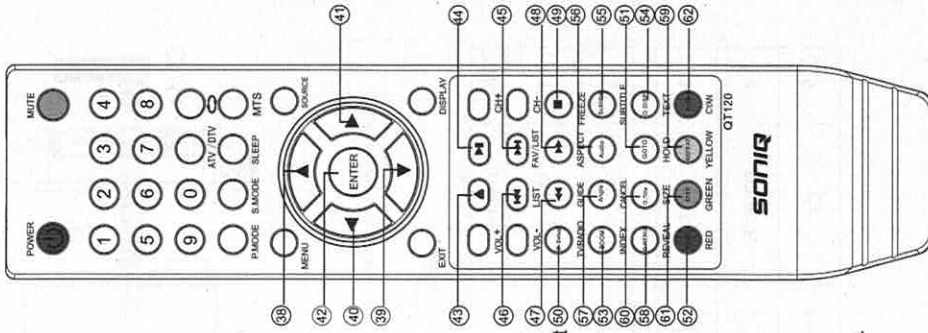 


**Power On /Off**

1. Connect the TV unit to power source using power cord. Switch on the main power on the back of panel.
2. When the power indicator in red, the TV is in standby mode. Now press the "POWER" button on remote control or front panel to turn on the TV. The TV works normally when the power indicator is in green.
3. Switch the TV to standby mode, just press "POWER" button on the remote control or front panel. Now the indicator will be in red.
4. The power consumption is less than 1W in standby mode. If unused for a long time, please disconnect the power cord from the wall outlet.

**Note:** The TV set can turn off automatically after 5 minutes while there has no signal input.

**Select Viewing Source**

 Press the "SOURCE" button to display the sources list.

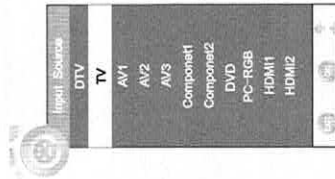

Please use the direction buttons to select desired signal, and press "ENTER" or "◀/▶" button to confirm.

**Note:**

Please make sure the connection for your choice is available. For example, "TV" for watching TV, "VGA" for PC. If the TV can't find any signal input, you can try to press "POWER" button on remote control or the button on the panel to restart the TV.

If you want to adjust the display settings, please follow the instruction below.

Press the "MENU" and "◀/▶" buttons to browse the Channel Menu, Picture Menu, Sound Menu, Time Menu, Option Menu and Lock Menu in turn.

Press "OK" or "▶" button to enter into the submenu.

Press "▲/▼" button to select items and "◀/▶" button to adjust it.

Press "MENU" button to return to the previous menu.

Press "EXIT" button to exit "MENU" mode.

 
Note: When an item in MENU is displayed as gray, it means that the item is not available or cannot be adjusted.

**CHANNEL MENU**

Press "MENU" and "◀/▶" buttons to select the CHANNEL MENU.

Press "OK" or "▶" button to select the items.

Press "▶" or "OK" button to enter the Submenu.

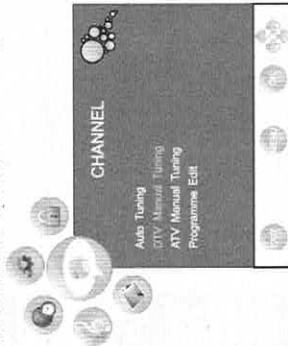**Auto Tuning**

Press "▶" and "ENTER" buttons to select Start.

Press "OK" button to enter "Auto Searching", the TV will search channels automatically.

All channels will be saved once searching finished.

In the course of auto searching, you can press "EXIT" to stop the searching process.



Note: If it is the first time installation, it will start with Installation Guide Menu.



In case a problem occurs with your LCD TV, please take the following steps first. If you still have the problem, turn the power off and contact your dealer or an authorized service center.

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug and flip the main power switch on the rear of the TV. Press the power button of the remote control.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute, contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or Contrast adjustment.
Screen is too large or too small.	Adjust the size with the ASPECT button.
Strips appear on the screen and it shakes.	Nearby wireless phones, hairdryers, electric drills or other electronics can sometimes affect TV picture quality.
The screen does not move.	Press the PAUSE button. Check if the Pause button is pressed on external equipment.
Screen appears, Voice is not heard	<ol style="list-style-type: none"> <li>1. Press the "MUTE" button.</li> <li>2. Increase the sound level by pressing volume adjustment button.</li> <li>3. Check if sound terminal of external input is connected properly.</li> <li>4. Check if audio cables are connected properly.</li> <li>5. Select and check the other input.</li> </ol> If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.
Remote control does not work	<ol style="list-style-type: none"> <li>1. Check if main power switch on the rear of the TV is On (set to "I").</li> <li>2. Check that the batteries of the remote controller were loaded properly.</li> <li>3. Check to see if any obstacle exists between the LCD TV and the remote control, then remove it, if any.</li> <li>4. If the batteries have no power, replace them with two new batteries.</li> </ol>

• This LCD TV is for household use and registered as harmless on electromagnetic waves.

### Supported PC Input Signal

VGA	800X600@60Hz
	1024X768@70Hz
	1024X768@60Hz
	1366X768@60Hz

▶ This VGA signal format is converted to match the number of Pixels of PDP Panel, the unit may not display small text properly.

### Supported HDMI/YBPBR Input Signal

YBPBR / HDMI	480 i/p 60HZ
	576 i/p 60HZ
	720 p 60HZ
	1080 i 60HZ
	1080 p 60HZ