


Remote Control

Remote Control Key Functions


- Power button**
Toggles the unit between standby and on.
- P.MODE button**
Press to select preset picture mode.
- S.MODE button**
Press to select preset sound mode.
- ASPECT button**
Press to change the aspect ratio of the TV display.
- SLEEP button**
Press to activate sleep timer.
- SUBTITLE button**
In DTV mode, press to change subtitle on/off.
- PAUSE button**
Press to pause the current picture, press again to resume.
- I-III/AUDIO button**
Press to select sound output mode.
- INFO button**
Press to display the information of current system.
- MUTE button**
Press to mute the sound. Press again or press VOL+ to resume.
- Numerical buttons**
Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.
- FAV button**
In TV mode, press FAV button to display your favorite programs.
- SOURCE button**
Press to display all possible input sources.
- Navigation keys (▲/▼/▶/◀/OK)**
Allows you to navigate the on-screen menus and adjust the system settings to your preference.
In DTV or ATV, press OK to display Channel List.
- REC**
Press to record program to memory storage.
- REPEAT button**
In media source, press to repeat 1/All or None.
- TSR**
Press to delay the process of program broadcasting.
- PVR.L**
Press to display the recorded program list.
- CANCEL button**
Press Cancel button on the remote control to enter energy saving mode when playing music.
- TEXT button**
On/off the teletext.
- HI button**
Press to playback or pause the program.
- INDEX button**
Teletext index page.
- EXIT button**
Press to return to previous chapter or track.
- TXT.Size**
Toggles the text size display between half top page, half bottom page and normal.
- D/A button**
Press to skip to next chapter or track.
- HOLD button**
Switch directly between ATV and DTV.
- STOP button**
Stop refurbish Text current page.
- REVEAL**
Press to stop media play.
- REVEAL**
Display hidden Text characters.
- ◀ button**
Press to fast reverse playback.
- SUB.PAGE**
Prompt the user to enter a subcode for the Text page.
- ▶ button**
Press to fast forward playback.

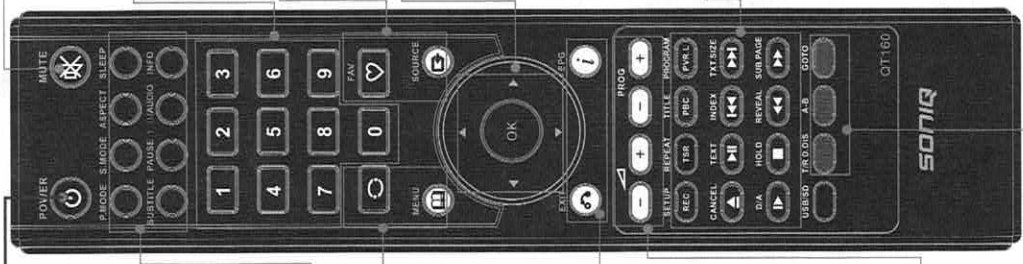

- EXIT button**
Exit most menu to default status directly.
Press to quit all menu.
- EPG button**
Open or close EPG menu.
- VOL +/-**
Press to increase/decrease the sound level.
- PROG +/-**
Selects a programme in DTV and ATV mode.
- T/R button**
In DTV mode, press to switch between radio and DTV channels.
- A-B**
Press to select A-set, AB-set, None for repeat function.
- GOTO**
Press to set the time at which movie or music start to play.
- Menu button**
Press to return to previous channel.
Press to display the main menu.

Note:

▲ SETUP, TITLE/PBC, PROGRAM, ▲, ▶, USB/SD, D.DIS functions are invalid in this model.

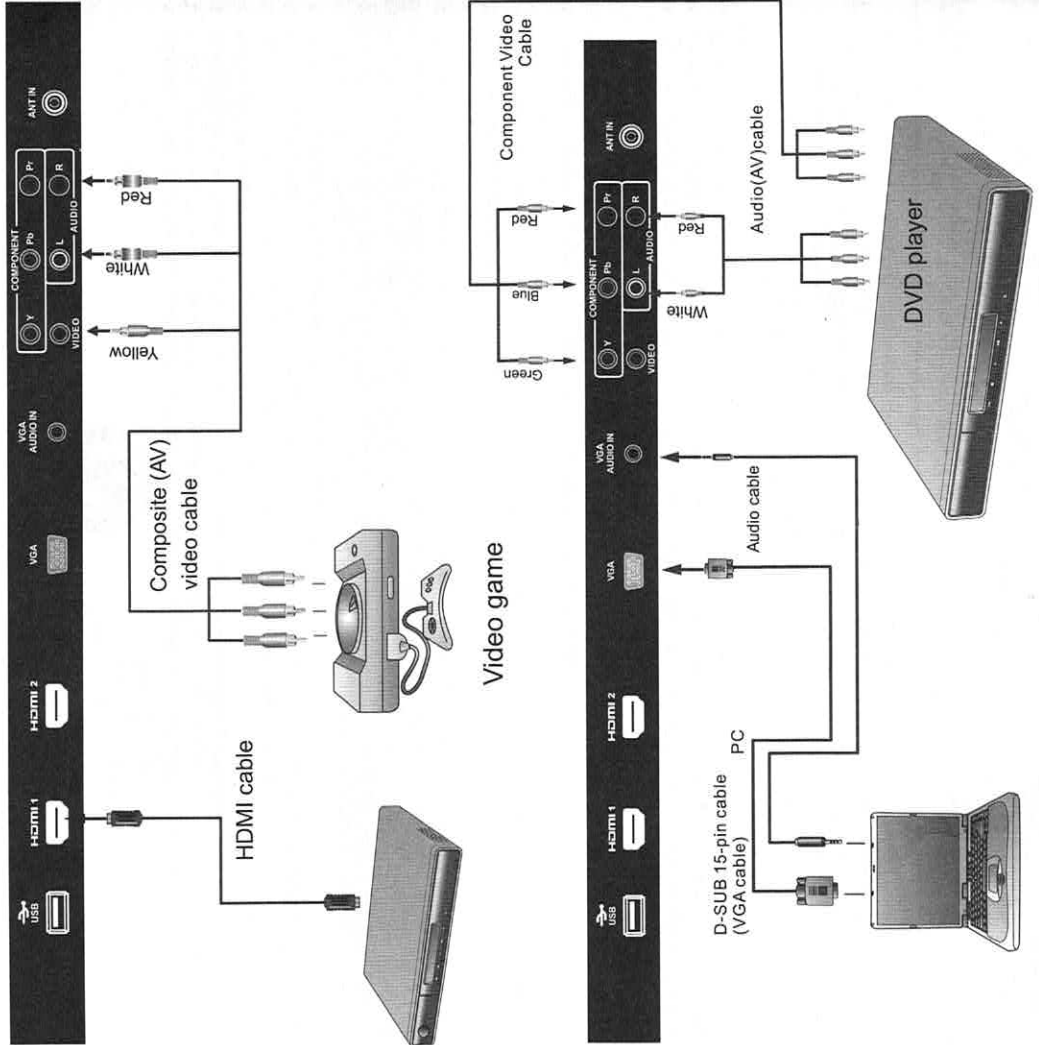

Connecting the USB Device

Insert USB device directly to the unit.

- Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please use only a USB storage device which was formatted as a FAT32 file system, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility programmer which is not supported by Windows, it may not be recognized.
- Please connect power to a USB storage device (over 500mA) which requires an external power supply. If not, the device may not be recognized.
- If the USB HDD does not have an external power source, the USB device may not be detected. So be sure to connect the external power source.
- The recommended capacity is 1TB or less for a USB external hard disk and 32GB or less for USB memory.
- Only English is supported in USB mode. Other languages such as Chinese, Japanese, etc. Will not be displayed or display an error.