

SONIQ

Instruction Manual



L32V12B-AU

Remote Control

Remote Control Key Functions

Power button
Toggles the unit between standby and on.

MUTE button
Press to mute the sound. Press again or press VOL +/- to resume.

Numerical buttons
Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.

P.MODE button
Press to select preset picture mode.

S.MODE button
press to select preset sound mode.

SUBTITLE button
In DTV mode, press to change subtitle on/off.

I-II /AUDIO button
Press to select sound output mode.

INFO button
Press to display the information of current system programme.

FAV button
In TV mode, press FAV button to display your favorite programs.

SLEEP button
Press to activate sleep timer.

PAUSE button
Press to pause the current picture, press again to resume.

ASPECT button
Press to change the aspect ratio of the TV display.

MENU button
Press to display the main menu.

SOURCE button
Press to display the main menu.

EXIT button
Exit most menu to default status directly. Press to quit all menu.

EPG button
Open or close EPG menu.

Navigation keys (▲/▼/◀/▶/OK)
Allows you to navigate the on-screen menus and adjust the system settings to your preference.
Press OK in DTV mode to display channel list.

REC/SETUP button
Press to record program to memory storage. Press to open the setup window of DVD.

REPEAT /TSR button
In media source, press to repeat 1/All or off. Has the function of timeshift under DTV mode.

TSR
Press to delay the process of program broadcasting.

T/R button
In DTV mode, press to switch between radio and DTV channels.

D.DIS button
Press to display the DVD information under DVD mode.

A-B button
Enables you to repeat a selected section from the disc.

GOTO button
Set the play time during DVD playback.

VOL +/-
Press to increase/decrease the sound level.

CH ▲/▼
Selects a programme in DTV/ATV mode.

PBC/TITLE button
Press to go back to the main menu during disk playback.

PVR.L
Press to display the recorded program list.

CANCEL ▲ button
Only available in interactive application, TEXT menu and Music source.
To eject the disk under DVD mode.

TEXT button
on/off the teletext.

▶ button
Press to playback or pause the program.

D/A ▶ button
Switch directly between ATV and DTV.

SLOW
Slow playing the disk under DVD.

REVEAL
Display hidden Text characters.

◀ button
Press to fast reverse playback.

SUB. PAGE
Prompt the user to enter a subcode for the Text page.

▶▶ button
Press to fast forward playback.

HOLD button
Stop refurbish Text current page.

■ button
Press to stop media play.

INDEX button
Teletext index page.

◀◀ button
Press to return to previous chapter or track.

TXT Size
Toggles the text size display between half top page, half bottom page and normal.

▶▶▶ button
Press to skip to next chapter or track.

▲ **Note:**
*USB/SD, 3D, DVD are invalid.