



Qplay

DVD PLAYER WITH
iPod DOCKING

Instruction Manual


QPi600B

SONIQ

Remote Control

-
1. **▲ OPEN/CLOSE Button**
Press to open or close the disc tray.
 2. **⏻ STANDBY/ON Button**
Press to turn on the unit or put it in standby mode
 3. **AUDIO Button**
Press to select one of the audio sound tracks programmed on a DVD or to select the audio output mode on an audio CD.
 4. **ANGLE Button**
Press to switch the camera angle of the video presentation when scenes with multiple camera angles are recorded on a DVD.
 5. **MEMORY Button**
Press to create programs of a CD/DVD.
Press to choose picture switch mode in JPG files.
 6. **DISPLAY Button**
Press to change disc status information displayed on the TV screen.
 7. **SETUP Button**
Press to open and close the SETUP menu screen
 8. **CURSOR (▲, ▼, ◀, ▶) Button**
Press to highlight selections on a menu screen and adjust certain settings.
OK Button
Press to confirm selections on a menu screen.
 9. **CLEAR Button**
Clear input selections and cancel certain playback functions.
 10. **▶ PLAY Button**
Press to start playback.
 11. **■ STOP Button**
Press to stop playback.
 12. **◀◀ SEARCH Button**
Fast reverse playback.
 13. **◀◀ REV Button**
Press to move backwards through titles, chapters or tracks on a disc.
 14. **Number (0-9) Buttons**
 15. **A-B REPEAT Button**
Press to perform point-to-point repeat playback on a DVD or CD.
 16. **SOURCE Button**
Selects input sources.
 17. **SUBTITLE Button**
Press to select one of the subtitle languages programmed on a DVD.
 18. **ZOOM Button**
Zoom in an image.
 19. **RETURN Button**
Press to return to the normal operation after using the SETUP button.
Press to return to the previous menu in iPod mode.
 20. **TITLE Button**
Press to open the title menu screen.
 21. **MENU Button**
Press to open and close the DVD's menu.
 22. **HDMI Button**
Press to change the video output signals.
 23. **|| PAUSE Button**
Press to pause playback, frame advance.
 24. **▶▶ SEARCH Button**
Fast forward playback.
 25. **▶▶ NEXT Button**
Press to move forward through titles, chapters or tracks on a disc.
 26. **SLOW Button**
Press to perform slow forward playback of DVDs.
 27. **GOTO Button**
Press to skip directly to a specific location on a DVD.
 28. **DISC REPEAT Button**
Press to repeat chapter or title of a DVD. Press to repeat single track or whole CD.
Press to repeat songs/albums from your iPod.

Troubleshooting Guide

SYMPTOM	CAUSE (AND REMEDY)
No power.	<ul style="list-style-type: none"> • Ensure the AC power cord is connected. • The unit is not turned on.
The remote control does not function.	<ul style="list-style-type: none"> • Remove any obstacles between the remote and the unit. • Use the remote near the unit. • Point the remote at the remote sensor on the unit. • Replace the batteries in the remote with new one.
No sound or only a very low-level sound is heard.	<ul style="list-style-type: none"> • Make sure that you select ON mode. • The system is in pause mode. Press the ► PLAY button to return to normal play mode. • The unit is in fast-forward or fast-reverse mode. Press the ► PLAY button to return to normal play mode. • Make sure the AUDIO output is correct. • Make sure the audio cable is connected securely.
No picture or abnormal color.	<ul style="list-style-type: none"> • The region number of the disc doesn't match the region number of this unit.  • The TV is not set to receive DVD signal output. • The video/HDMI cable is not connected securely. • The TV is not turned on. • Clean the disc.
No output on your HDMI TV.	<ul style="list-style-type: none"> • Check connection between HDMI TV and the unit. • Replace the HDMI cable with a better one. Bad HDMI cable or cable longer than 2 meters can cause data lost. • Press HDMI key on remote handset several times to toggle among different HD OUTPUT. • Ensure the equipment is connected securely.
Severe hum or noise is heard.	<ul style="list-style-type: none"> • The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol. • Clean the disc.
The disc does not play.	<ul style="list-style-type: none"> • There is no disc inside. ("No Disc" appears on the screen). • Insert the disc correctly with the playback side facing down. • Clean the disc. • The unit and disc region number are incompatible. • Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.
The DVD door cannot open.	<ul style="list-style-type: none"> • Reset the unit, press the STANDBY/ON button to turn off the unit, wait for a few seconds, then restart the unit.

Specifications and external appearance are subject to change without notice.