


## Control panel

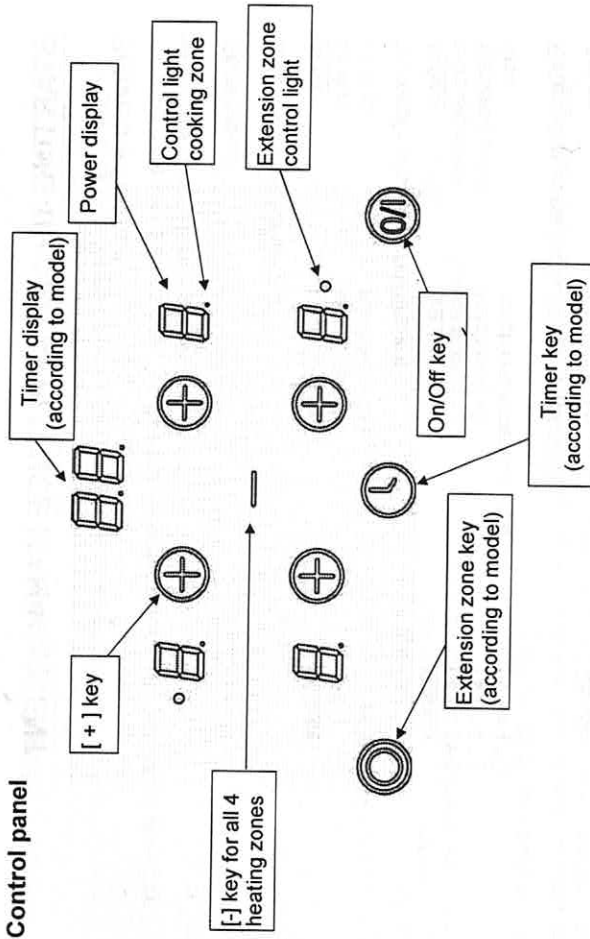

## USE OF THE APPLIANCE

### Sensitive touches

Your ceramic hob is equipped with electronic controls with sensitive touch keys. When your finger touches the key, the corresponding command is activated. This activation is validated by a control light, a letter or a number in the display and/or a "beep" sound. Touch only one key on the same time.

### Display

Display	Designation
0	Zero
1...9	Power level
A	Heat accelerator
E or F	Error message
H	Residual heat
L	Locking

### Function

The heating zone is activated  
 Selection of the cooking level  
 Automatic cooking  
 Electronic failure  
 The heating zone is hot  
 The Control panel is locking

### Residual heat indication

After the switch-off of the hob, the heating zone is still hot and indicates [ H ] on the display. The symbol [ H ] disappears when the heating zone may be touched without danger.

As far as the residual heat indicator is on light, don't touch the heating zone and don't put any heat sensitive object on them. There are risks of burn and fire.

## STARTING-UP AND APPLIANCE MANAGEMENT

### Before the first use

Clean your hob with a damp cloth, and then dry the surface thoroughly. Do not use detergent which risks causing blue-tinted color on the glass surface.

### Starting-up

Start-up/ switch off the hob

<b>Action</b>	<b>Control panel</b>
To start:	touch key [ 0/ ]
To stop:	touch key [ 0/ ]

Start-up/ switch off a heating zone

<b>Action</b>	<b>Control panel</b>
Increase power	touch key [ + ]
Decrease power	touch key [ - ]
Stop	touch simultaneous [ + ] and [ - ]

Extension zone (according to model)

<b>Action</b>	<b>Control panel</b>
Zone select	Touch key [ + ]
Switch off	Touch key [ 0 ]
Switch on	Touch key [ 0 ]

### Control panel locking

To avoid modifying a setting of cooking zones , in particular with within the framework of cleaning the control panel can be locked (with exception to the On/Off key [ 0/ ]).

Locking:

<b>Action</b>	<b>Control panel</b>
Start	Touch key [ 0/ ]
Hob locking	Touch simultaneous [ - ] and [ + ] from the front right zone
	Touch key [ + ]

Unlocking:

<b>Action</b>	<b>Control panel</b>
Unlocking the hob	Touch simultaneous [ - ] and [ + ] from the front right zone
	Touch key [ - ]

<b>Display</b>
[ 0 ] nothing or [ H ]

<b>Display</b>
[ 4 ] to [ 9 ] [ 9 ] to [ 1 ] [ 0 ] or [ H ]

<b>Display</b>
Control light is blinking Extension zone light is off Extension zone light is on

<b>Display</b>
[ 0 ] or [ H ] on 4 displays No modification [ L ] on 4 displays

<b>Display</b>
[ 0 ] or [ H ] on 4 displays No light on the displays

### Automatic cooking "go and stop"

All the cooking zones are equipped with an automatic "go and stop" cooking device. The cooking zone starts at full power during a certain time, then reduces automatically its power on the preselected level.

Start-up:

<b>Action</b>	<b>Control panel</b>	<b>Display</b>
Zone selection	Touch key [ + ]	[ 0 ] and control light on
Full power setting	Touch key [ + ]	[ 1 ] ..... to ..... [ 9 ]
Automatic cooking	Touch key [ + ]	[ 9 ] is blinking with [ A ]
Power level selection	Touch key [ - ]	[ 9 ] [ 8 ] [ 7 ] ..... [ 1 ]
(for example « 7 »)		[ 7 ] is blinking with [ A ]

Switching off the automatic cooking :

<b>Action</b>	<b>Control panel</b>	<b>Display</b>
Zone selection	Touch key [ - ]	[ 9 ] [ 8 ] [ 7 ] ..... [ 0 ]
Power level selection	Touch key [ + ]	Level selected

### Timer (according to model)

The timer is able to be used simultaneous with all 4 heating zones and this with different time settings (from 0 to 99 minutes) for each heating zone.

- **Setting and modification of the cooking time :**

<b>Action</b>	<b>Control panel</b>	<b>Display</b>
Zone selection	Press key [ + ] from the zone	[ 0 ]
Increase power	Press key [ + ] or [ - ]	[ 1 ] to [ 9 ]
To select « Timer »	Press key [ 0 ]	Timer [ 00 ] min
Decrease the time	Press key [ - ]	[ 00 ] went to 60, 59 ...
Increase the time	Press key [ 0 ]	The time increases

After a few seconds the control light stops with blinking.

The time is confirmed and the cooking starts until the time reaches [ 00 ] .

- **To stop the cooking time :**

<b>Action</b>	<b>Control panel</b>	<b>Display</b>
Zone selection	Press key [ + ] from the zone	[ 0 ]
To select « Timer »	Press key [ 0 ]	The remaining time
To stop the « Timer »	Press key [ - ] and [ 0 ] simultaneously	[ 00 ] then stops

If several timers are activated repeat the process.

- **Automatic stop at the end of the cooking time :**

As soon as the selected cooking time is finished the timer displays blinking [ 00 ] and a sound rings.  
To stop the sound and the blinking it is enough to press the key [ 0 ] .