 


TEAC

LEDV2282FHD

LED/LCD TV

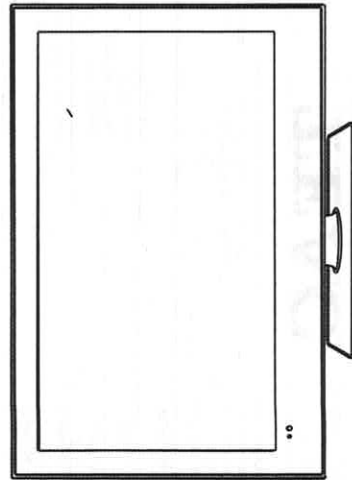

**“ For Optimum picture and sound quality,
please use TEAC Audio/Video cables ”**

TEAC High Performance Audio/Video cables and connectors have been designed to enhance your home entertainment experience.

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

 
Trademark of TEAC Corporation JAPAN

www.teac.com.au

Remote Control

● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.

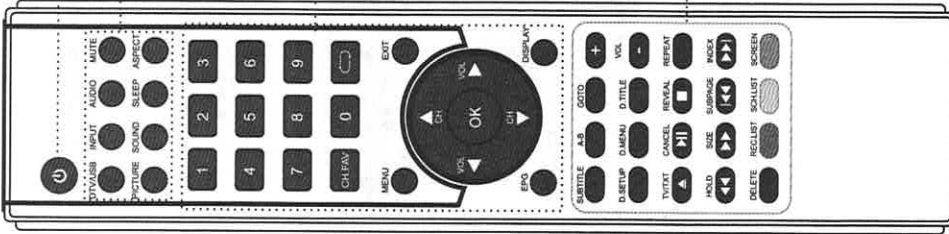

POWER: Turn the TV on/standby.

DIV/USB: Switch to DIV/USB.

INPUT: Display the input source menu.

AUDIO: Select different audio languages, subject to availability from broadcaster.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

PICTURE: Press repeatedly to cycle through the available video picture modes.

SOUND: Press to cycle through the different sound settings.

SLEEP: Repeatedly press to scroll to preferred off time.

ASPECT: Adjust picture size.

NUMBER BUTTONS: Choose channel directly. Press number buttons to view the channel.

CH.FAV: Displays Channel List, and the Favourite Program List.

MENU: Press to display the OSD menu.

EXIT: Press to exit the OSD menu.

CURSOR KEYS (▲/▼/◀/▶/OK)

Allows you to navigate through the on-screen menus and adjust the system settings to your preference.

CH ▲/▼: Channel/Program+/-...

VOL ▲/▶: Volume +/-. (Not available in DVD input mode)

EPG: To show the Electronic Program Guide.

DISPLAY: Press to display the current mode's information.

VOL +/-: Volume +/-.

SUBTITLE: Select DVD disc subtitle.

A-B: Press once at the beginning of a chosen section and again at the end to define points A and B on a track for looping playback between these points.

GOTO: Jump directly to a specific line within the title/chapter/track with number keys.

D.SETUP: DVD system setup.

D.MENU: DVD play list/Disc menu.

D.TITLE: DVD title.

REPEAT: Repeat playing the title or chapter.

DELETE: Delete REC program.

REC.LIST: Record List.

 
SCH.LIST: Display Scheduled Recordings list.

SCREEN: 1- While playing music, press this button to turn off the LCD TV screen.

2- While in HDMI input, press this button to change between Video and PC mode

3- While in VGA (PC) input, press to auto-align screen.

Remote Control

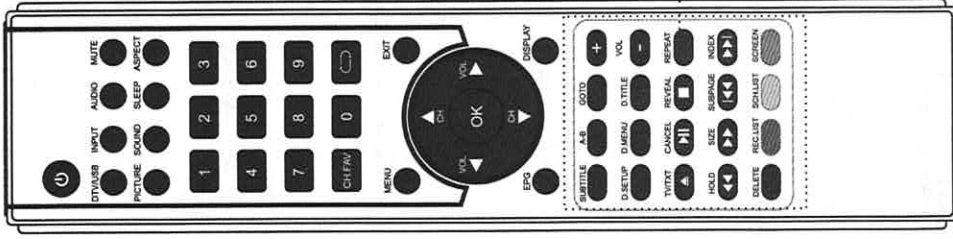

User Guidance
Basic Operation
OSD Menu
Multimedia
Recording
DVD Operation
Maintenance and Service

Buttons for USB/DVD operation:

- (REC): Press to start recording the program in DTV mode.
- ▲ : Load/Eject DVD disc.

- : Stop program.
- ⏮ : Previous chapter.
- ⏭ : Next chapter.
- ⏸ : Play/Pause program.
- ⏪ : Fast reverse.
- ⏩ : Fast forward.

Buttons for TELETEXT operating

Teletext is an information system broadcasted by certain channels which can be consulted for news, weather forecasts, puzzles, etc. and also offers subtitles for viewers with hearing problems or who are not familiar with the transmitted language. Subject to availability from your service provider.

TVTEXT: Turn off/on the Teletext display.

CANCEL: Cancel the Teletext display.

REVEAL: Reveal any hidden text.

HOLD: Hold or carry on the current subpage.

SIZE: Press to see top half of page double size. Press again to see the bottom half of page double size. Press again for normal size.

SUBPAGE: Press to subpage, again to cancel.

INDEX: Go to index.

SCHLIST: Display the programs list.

Colour buttons: Short cuts - follow the coloured links on screen.

Troubleshooting

- Do not use other functions that are not mentioned in this user manual.
- If a problem occurs with your LCD TV, please take the following steps first
- If you still have the problem, turn the power off and contact your dealer or an authorized service center.

Problem	Action
The picture does not appear.	Is the power plugged in? Insert the power plug. Press the power button on the remote control.
The picture appears too slowly after the power is turned on.	Like your computer, the TV has to run a number of diagnostic and software checks before it can display any broadcast channels. The picture should appear in approximately 15 seconds.
Screen is too bright or too dark.	Perform brightness adjustment or contrast adjustment.
Screen is too large or too small.	Adjust the aspect settings.
Stripes appear on the screen and it shakes.	Keep any appliances that emit magnetic radiation away from the TV
The screen does not move.	Press the PAUSE button. Check if the Pause button is pressed on external equipment.
Screen appears but there is no sound	<ol style="list-style-type: none"> 1. Check if the "MUTE" function has been activated 2. Increase the sound level by pressing volume adjustment button. 3. Check if sound terminal of external input is connected properly. 4. Check if audio cables are connected properly. 5. Select and check the other input. <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.</p>
Remote control does not work	<ol style="list-style-type: none"> 1. Check if main power is On. 2. Check that the batteries of the remote controller were loaded properly. 3. Check to see if any obstacle exists between the LCD TV and the remote control, then remove it, if any. 4. If the batteries have no power, replace them with two new batteries. <p>Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies. Low signal level can cause picture distortion. This is not a TV issue. Have the antenna assessed.</p>
Picture is distorted	
USB not playing	Please check if the USB is connected properly. Please make sure USB disk is compatible and the multimedia data formats are supported (see Specifications page).

Specifications

LCD Panel	Panel Size	21.6"
Pixel Resolution		1920 x 1080 LEDV2282FHD
Input Connector	VIDEO	1
	YPbPr	1
	AUDIO (L/R)	1
	VGA	1
	PC/AUDIO	1
	HDMI (The HDMI support 1.3, the HDCP support 1.1)	2
Output Connector	RF	1
	HEADPHONE	1
	COAX	1
Power Source		DC12V 3A
Power Consumption		36W
Standby Power Consumption		<1W
Contrast Ratio		1000:1
Brightness		230cd/m ²
Response time		5ms
TV receive system		PAL BG/DK/I SECAM BG/DK/L/L*
Frequency range		48.25 - 863.25 MHz
Speaker output power		2×3W
Speaker Impedance		75 ohm
USB file system		NTFS FAT32 (Maximum supported hard disk size: 400G)
Recommended USB storage		USB2.0
Supported Multimedia Player Formats		See the table on next page
PC Input supported resolution		WUXGA (Maximum supported resolution: 1920X1080 @ 60Hz)
Dimensions (With Stand)		535x165x396mm
Dimensions (Without stand)		535x48x355mm
Weight		4.8kg
Wall mounting dimensions		100x100mm
Wall mounting screw size		M4X10
Operating temperature range		0-40 C

- Specifications are subject to change without notice. Weight and dimensions are approximate.