

TEAC[®]

DV222
HOME DVD PLAYER



 
USER MANUAL

IMPORTANT!

WARRANTY INFORMATION INSIDE. PLEASE READ

— Trademark of TEAC Corporation JAPAN

www.teac.com.au

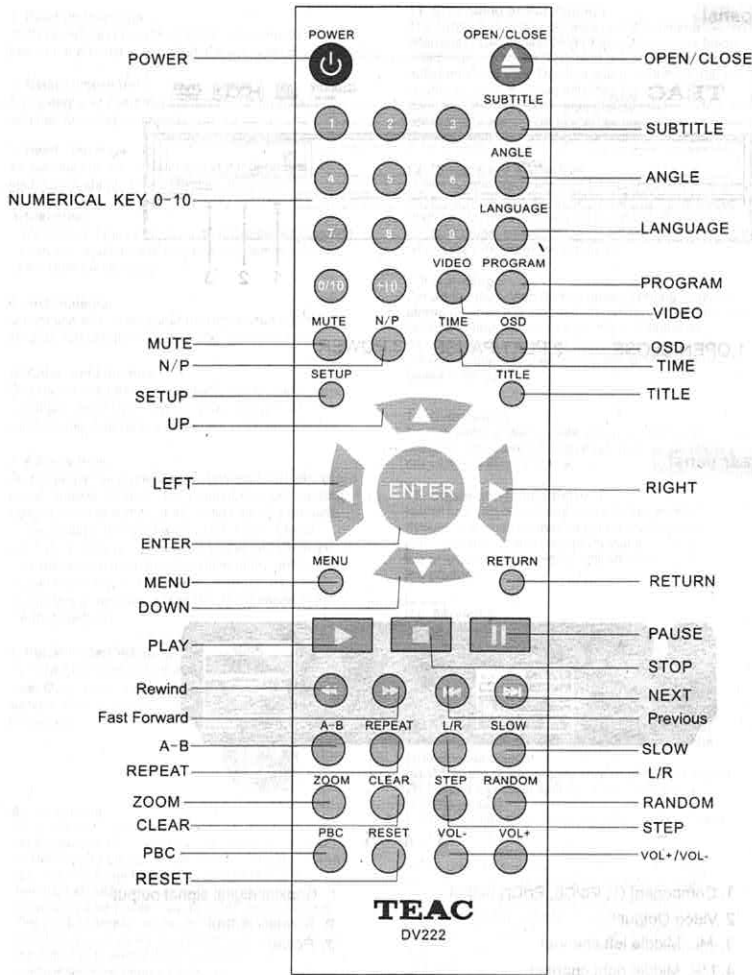


Please note in this Instruction book the "←" "→" "↑" "↓" arrows will be used to represent the Navigation Arrows on the Remote Control.

When the batteries of the Remote control are exhausted, do NOT breakopen or throw in a fire. Contact your local waste authority for disposal advice.


Operating Instructions For Functions

Fast Forward & Fast Backward

When playing DVD or other discs, press **FF** button to enter fast forward mode. There are 4 different speeds available. Each time the button is pressed, the speed is increased in the multiple of 2.

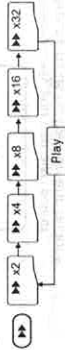

- Pressing **FF** button will enter fast rewind mode. Select fast rewind speed by pressing the **FF** button.

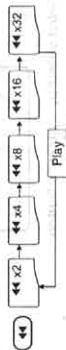


- To resume to normal play mode, press **Play** button.

Slow Motion

When playing DVD or other discs, press **SM** button to play video in slow motion. This feature is available in forward mode. By pressing the **SM** button 1-32 times video is played in slow motion forward at different speeds.

 (SLOW)

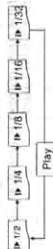

- Press **SM** button to or **ENTER** resume normal play at any speed.

Track or Chapter Skip

When playing a DVD disc, press the **TS** button to skip to the previous chapter. When playing other types of discs, press this button to skip to previous track.

 
When playing a DVD disc, press the **TS** button to skip to the next chapter. When playing other types of discs, press this button to skip to next track.

Note: Whether this function works depends on the disc type in use.

Repeat


When playing DVD and other discs, the player can play a specified title, chapter, track or other content repeatedly. User can also choose to repeatedly play the whole disc or repeat play from point A to point B.

For DVD discs, when the **REPEAT** button is pressed continuously, the screen will display as follows:

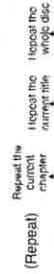

Repeat appointed part

 This function is for you to play the desired part. Press **A-B** button to select.

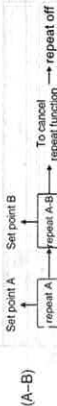

Note: The operation of other discs is similar to DVD

Zoom

Zoom in the Video Image (compatible with DVD, SVCD, VCD, JPEG discs)

- The Zoom Function allows you to enlarge or zoom out of the video image and to pan through the image. Press **Zoom** repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 4, Zoom 1

- Notes:
- This feature does not work when the Disc Menu appears.
 - Use the Arrow buttons to pan across the screen while in zoom mode

Multi angle DVD play

Some DVD discs may contain scenes shot from different angles, in this case the **ANGLE** key may be used to view the same scene from different angles.




This function is only applicable to discs that recorded with scenes shot at different angles.

OSD-On Screen Display

On screen display can be displayed to check the playing time and remaining time for each title, chapter, track or the whole disk. Press **OSD** key to check.

Operating Instructions For Functions

SVCD VCD discs.

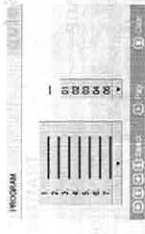

If PBC is on, this operation will turn PBC off while the chapters/tracks plays in programmed order.

Timed play

When playing a video or audio disc, you can go to your desired position directly via this function. Press the **TIME** key to display on screen as follows:



Using the direction keys, digit keys to enter the chapter, title or time's value, then press **ENTER** to start playing.

Note: The operation of other discs is similar to DVD.

Audio Language Selection

During disc playback, press **Language** on the remote once, and the audio language info banner appears.

When a DVD or SVCD is recorded with multiple soundtracks, you can use the **Language** feature to change the audio language (the language of the soundtrack)

There are 8 supported languages: Chinese, English, Japanese, French, Spanish, Portuguese, German and Latin. With each consecutive press of the **Language** button, the audio language switches and the corresponding serial number appears on the screen. For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the languages are disc-dependent).

Select Subtitle Language

When playing a DVD disc with subtitles, you can choose a desired subtitle with the **SUBTITLE** button. For example, There are 3 different language subtitles available on the DVD disc.

- Press the **SUBTITLE** button to select a subtitle with desired language as shown on the TV screen.

Subtitle: French 01/03

- To disable subtitle display, press **SUBTITLE** button until "Subtitle: off" is shown on TV screen.

- The function of subtitle is only available for discs with multi subtitles. The subtitle language varies as per discs.

Program Play

Compatible with DVD, SVCD, VCD, CD, CD-G, HD-CD, VMA, MP3/JPEG disc.

The program playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.

- Program Menu: DVD discs.



How to handle discs

To handle, clean and protect discs

- Do not touch the playing side of a disc
- Do not stick any paper or glue strip on a disc.



How to clean discs

- Fingerprints and dust on surface can affect the sound and picture quality. Clean discs regularly with a soft cotton cloth from disc center to outside



- For sticky dust, wipe it with wet cloth and with dry cloth. Any kind of solvent, such as diluting agent, gasoline liquid detergent, and anti-static aerosol, used or vinyl LP may cause disc damage

How to protect discs

- Keep away from the direct sunshine or any heat source.
- Do not put discs in damp or dirty places, such as bathroom or near humidifiers. Store discs vertically in disc box and store in a dry place. Piling discs on top of each other or excess weight load on disc box may cause the disc to warp.

Disc Compatibility

- Some DVD discs may have special requirements for playing and may not be compatible with this player

DISC TYPE	Content	Size	Total Play time
DVD	AUDIO/VIDEO	12CM	About 2hrs. (Single side & single layer)
			About 4hrs. (Single side & double layer)
			About 4hrs. (Double side & single layer)
CD-DA	AUDIO	12CM	About 80 mins. (Double side & double layer)
Mp3	AUDIO	12CM	About 300 minutes

NOTE:

This DVD player can play the above listed discs. Discs other than listed above cannot be played by this player.
This player uses NTSC/PAL colour system. It cannot play discs recorded with other systems such as SECAM.

Copyright

According to the related law, DVD discs without proper authorization are not allowed to be copied and to be played publicly. As DVD discs have copy-protected schemes in place, the copied content is always distorted.

TV system

Connect this player to a PAL/NTSC compatible TV.

Problems and Solutions

Problems	Cause	Solution
No power indication	Power plug not connected	Plug the power cord into the power supply
No picture	TV has not been set to the correct video input	Set correct TV video input format for receiving the player's output signals.
	Video cable not firmly connected.	Firmly insert the video cable ends to the related terminals.
	Audio cable not connected tightly	Firmly insert the audio cable ends to the related terminals.
	Power of audio apparatus is off	Turn on the power of audio apparatus.
No sound	Audio output setting is incorrect	Setup audio output correctly via the setup menu.
	Disc is dirty	Take out the disc and clean.
Picture distortion	Fast forward/backward is activated	The picture may be distorted during fast-forward/backward playback.
	Affected by anti-piracy circuit	Connect the player directly to TV.
Brightness unstable or noisy	No disc	Load a disc.
	Disc not compatible	Load a compatible disc (Check the disc format and its color system).
The player does not work	The disc is placed upside down	Load a compatible disc (Check the disc format and its color system).
	The disc is not put in the tray correctly	Check disc is put in correctly.
	Disc is dirty	Clean the disc.
	Player settings are incorrect	Change the setting via the setup menu.
	Parental lock is in effect	Disable this function or reset the rating level.
	Interference of power wave or other factors such as static interference	Turn off the main switch or pull out the power plug, plug it in and turn on the power again.
Remote control does not work	The remote control is not pointed at the remote sensor on the front panel of the player	Point the remote control at the remote sensor.
	The remote control is out of specified range	Make sure the remote control range is within 7 meters to the remote sensor.
	Battery power exhausted	Replace with new batteries.