

TEAC

DVS1000HD
DVD/DVB/T Combo Player



**“ For Optimum picture and sound quality,
please use TEAC Audio/Video cables ”**

TEAC High Performance Audio/Video cables and connectors have been designed to enhance your home entertainment experience.

USER MANUAL

 
IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ


Trademark of TEAC Corporation JAPAN

www.teac.com.au

REMOTE CONTROL

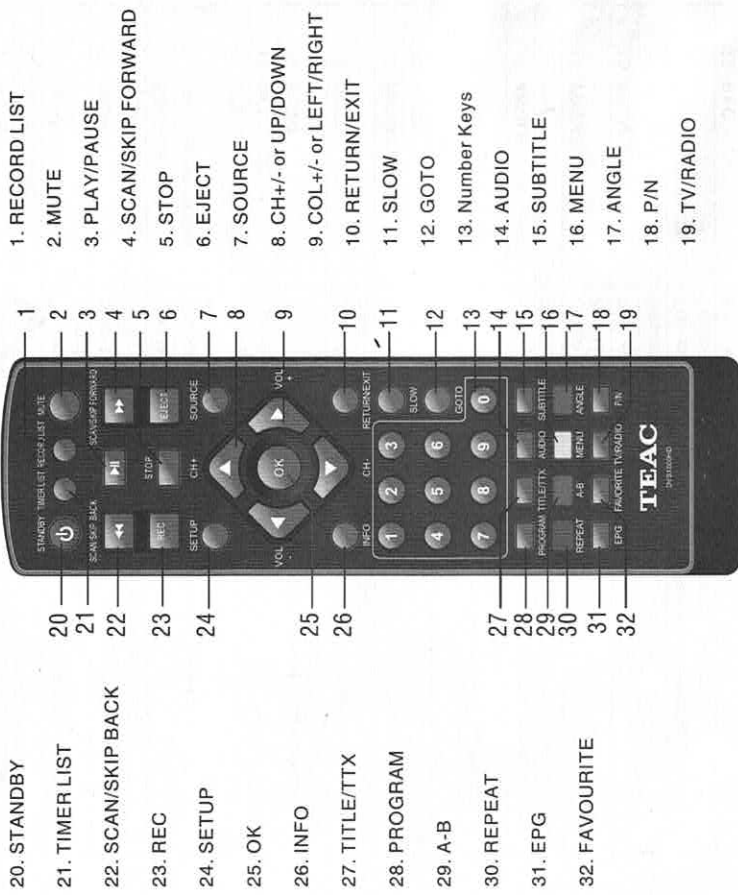

CONNECTION SETUP

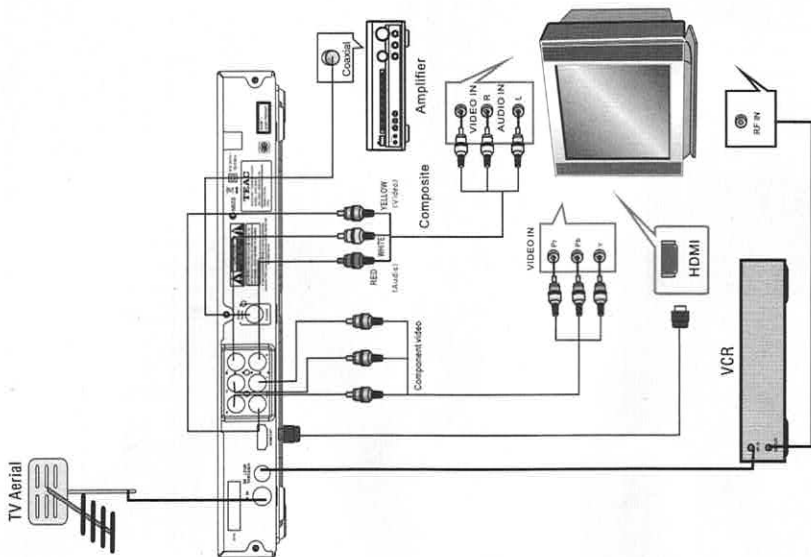 

Please ensure that the power is completely disconnected before making or changing cable connections. To connect the Set Top Box unit to your television, please use any one of the methods below:

- For a basic connection from your Set Top Box to the television set, use the Composite Connection.
- For a higher quality connection, use the Component Video Connection, combined with the Audio Connection.
- For the highest quality connection, use a HDMI connection.

To connect to an amplifier, plug one end of a coaxial audio cable into the coaxial digital audio socket on the unit and plug the other end into the matching socket on your audio receiver. This feature is only available for amplifiers equipped with coaxial digital audio input connectors.

To connect to a DVD recorder or VCR, use the AV cables to connect the external DVD recorder or VCR to the AV output jacks on the rear panel of the unit.

Note: - While HDMI is connected, the Composite Connection will not be active.

Button Functions

BUTTON	DVB MODE	DVD MODE
1. RECORD LIST	Display Recorded File List	-
2. MUTE	Silence audio output. Press again or press Vol+/- to unmute	
3. PLAY/PAUSE	Start or pause file/DVD playback	
4. SCAN/SKIP FWD	Tap once to skip to next track. Press and hold to fast forward. For different speeds up to 16x, repeat this motion.	
5. STOP	Stop recording or playback	Stop playback
6. EJECT	-	Open/close disc tray
7. SOURCE	Switch between DVB and DVD mode	Navigate menus
8. CH+/- or UP/DOWN	Change TV channels or navigate menus	
9. VOL+/- or LEFT/RIGHT	Change volume or navigate menus	
10. RETURN/EXIT	Exit menu	
11. SLOW	-	Slow motion video playback, Press again for different speeds
12. GOTO	Jump to a specified time in the current video/audio track	Jump to a specific track in the disc
13. Number Keys	Key in numbers for channel changing or certain menu settings	
14. AUDIO	Select available audio tracks	
15. SUBTITLE	Select available subtitles	
16. MENU	-	Display last DVD submenu or file browser
17. ANGLE	-	Select available camera angles
18. P/N	Select picture resolutions	Zoom in/out
19. TV/RADIO	Switch between TV and Radio channels	-
20. STANDBY	Turn the unit on/off Standby Mode	
21. TIMER LIST	Display Schedule List	
22. SCAN/SKIP BACK	Tap once to skip to previous track. Press and hold to fast rewind. For different speeds up to 16x, repeat this motion.	
23. REC	Start recording TV program	
24. SETUP	Access DVB settings menu	Access DVD settings menu
25. OK	Confirm a selected setting, or play a selected channel/file	
26. INFO	Show/hide detailed information on currently playing media	
27. TITLE/ITX	Display Teletext (subject to availability from broadcaster)	Display main (root) DVD menu (subject to availability on DVD)
28. PROGRAM	-	Program a playlist for DVD tracks by Title and Chapter
29. A-B	-	Press during playback to set points A and B for looping playback
30. REPEAT	-	Toggle Repeat modes: Single, Folder, Off
31. EPG	Display the Electronic Program Guide (EPG)	
32. FAVOURITE	Display your Favourite Channel List	

Note:

- In order to operate any of the remote control functions, the Set Top Box must be powered on.
- When changing between DVB and DVD modes, the Set Top Box will take a few seconds to reboot.

Inserting Batteries

Remove the battery cover from the rear of the Remote Control and place two AAA size batteries inside the compartment. Please make sure that the battery polarities match the polarity markings as marked in the compartment.

Using the Remote Control

To use the Remote Control, point it towards the front of the Digital Set Top Box as illustrated in the image below. The Remote Control has a range of up to 7 meters from the Set Top Box at an angle of up to 60 degrees.

Note:

- The Remote Control will not operate if its path is blocked.
- Direct sunlight or very bright light will decrease the sensitivity of the Remote Control.

DVB (DIGITAL TV) MODE

BASIC OPERATION AND SETTINGS

Initial Setup and Channel Tuning

After ensuring all connections are correct and secure, switch on the power supply and switch on the TV. Press the Power button to switch on the Digital Set Top Box. If you are using the receiver for the first time or have restored the unit settings to Factory Default, the INSTALLATION GUIDE will appear on your TV screen.

- OSD Language:** Press the RIGHT/LEFT key to select a language
- Country:** Press the RIGHT/LEFT key to select your country of residence
- Channel:** Search Press the RIGHT or OK key to begin Automatic channel search

Once channel tuning is complete, you can start watching TV. If no channels were found, please check your external antenna setup. For detailed instructions on Auto or Manual Channel Tuning, please see the Channel Search section.



Note:

- Enable Antenna Power if an external active antenna is connected by accessing the Channel Search menu.

Program Settings

First, press the SETUP button. To manage your TV channels, access the Program tab and navigate with the directional buttons. Select an option and press OK or RIGHT to adjust that setting. Press the EXIT button to exit the Menu.


1. Program Edit

To edit channel preferences, enter the Program Edit Menu. This Menu requires a password to be accessed. The default password is '000000'. If you have lost your password, use the Master unlock password '888888'.

PICTURE CD PLAYBACK

After the Picture CD is loaded, the CD contents will be displayed in a file browser as shown above. Navigate folders and files using the directional buttons. Press OK on a folder to enter the folder. Press OK on the 'Up Folder' icon on the top to return to the previous directory. Press OK or PLAY on a selected picture file to view it.

 Picture Rotation: Press the directional buttons to rotate the picture.
Picture Scan: Press the ANGLE button to change picture scan mode.

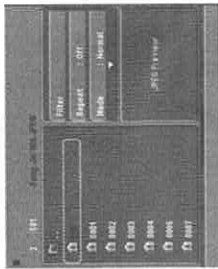

TROUBLESHOOTING

If you experience problems with this Set Top Box or its installation, please read the relevant sections of this User Manual and this Troubleshooting section carefully.

Problem	Possible cause	What to do
Standby light is not lit	Power cable is unplugged	Check the AC power connection
No signal or channels found	Power fuse is blown	Check fuse
	Aerial is disconnected Aerial is damaged/misaligned	Check aerial connection and condition
Sound but no picture	Out of digital signal area	Check with dealer
Distorted or freezing picture	Tuned to digital Teletext channel	Retune to another channel
	Aerial may not be compatible	Check aerial
Scrambled channel message	Channel is scrambled	Select an alternative channel
Forgotten channel lock password		Retune channels to erase channel lock
No response to remote control	Unit is turned off	Plug in power and turn unit on
	Remote control not aimed correctly	Aim remote control at the unit
Lost channel reception after moving the unit to another room	Obstructions between remote control and front panel receiver	Remove obstructions
	Remote control batteries are incorrectly inserted	Reinstall batteries according to correct polarities
	Remote control batteries are flat	Replace remote control batteries
'Bad disc' is displayed	The aerial feed may come through a distribution system which may reduce the digital signal now received by the receiver	Try a direct feed from the antenna
	Ensure the disc is not warped, damaged, stained or deformed. Ensure the disc format is compatible with the player. Please check whether you have tried to play a software CD, if so, please restart the player.	
'No disc' is displayed	Ensure that you have inserted the disc correctly with the right side up.	Ensure the disc is not distorted, stained or scratched.