


Instructions for use

X2-20ES

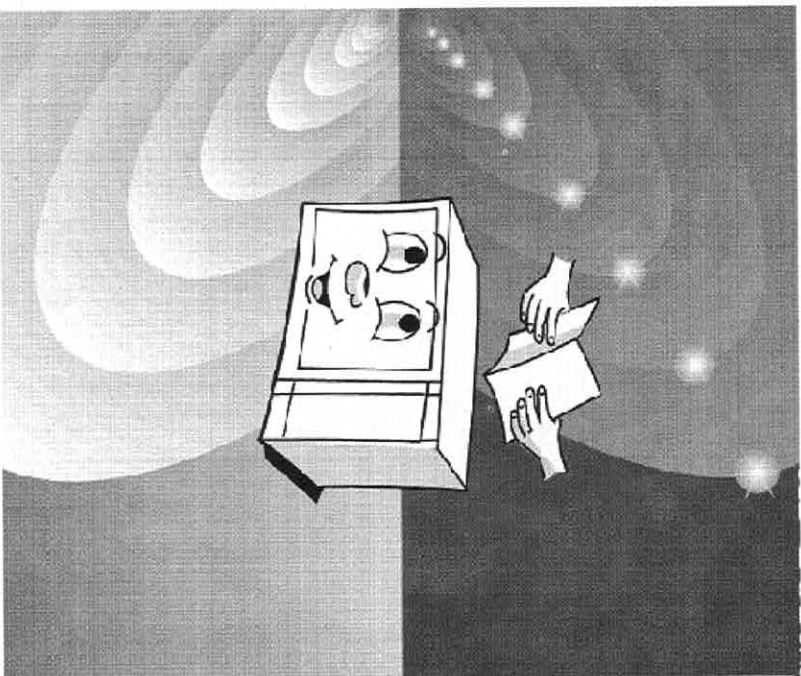

Whirlpool

3. The cooking recipe provides approximate time of the cooking because there are a number of factors that influence it such as the preferred doneness of the food, initial temperature and shape of food, weight and amount of food and the shape of container used in cooking and its size, the arrangement of food, whether it is covered or not, if it is turned for uniform cooking, etc. please have a look of the "techniques of the microwave cooking" and adjust the cooking time if needed.
4. For food such as egg, chestnut, potato, sausage which there is no holes on them, the skin of these food should be cut or some holes or cracks should be made on its skin to prevent explosion due to expansion through heat.
5. Do not use the microwave oven to fry food.

Operation method

ADJUST CLOCK

Example: 6:45

Steps:

1. Press **CLOCK**
2. Press **STOP**
3. Press number keys 6 4 5
4. Press **CLOCK** again.

MICROWAVE COOKING

Example: Input 2 minutes, at power level 3 cooking program.

Steps:

1. Press **TIMER**.
2. Press number keys 2 0 0
3. Press **POWER** to display
4. Press number key 3
5. Press **START**.

START DELAY

Example: if it is 1 o'clock, to input 2 minutes at power level 3 starting at 2 o'clock.

Steps:

1. Press **START DELAY**.
2. Press number keys 2 0 0 (Time of day)

3. Press **TIMER**

4. Press number keys 2 0 0 (Cooking

Duration)

5. Press **POWER**
6. Press number key 3
7. Press **START**.

The microwave will start at 2 o'clock.

EXPRESS

Example: using the express cooking function, input 2 minutes, at the highest power level cooking program.

Steps:

1. Press **EXPRESS** until 2:00 will be displayed.
2. Press **START**.

WEIGHT DEFROST

Example: input a 600g shrimp defrost program

1. Press **WEIGHT DEFROST** to display d3
2. Press number keys 6 0 0
3. Press **START**.

Note: during weight defrost, foods may be turned for uniformity.

QUICK DEFROST

Example: input a 5 min 30 sec. on Quick Defrost program.

Steps:

1. Press QUICK DEFROST.
2. Press number keys 5 3 0
3. Press START.

Note: the Quick Defrost function is not applicable to foods outside of the range of the weight defrost food's weight.

13. Press START.

Note:

1. Quick Defrost and Weight Defrost can only be set in the first stage and memo pressed before entering 1 or 2 stage cooking.

2. Press MEMO before pressing START to reset 1st stage or 2nd stage cooking program.

3. Quick cooking cannot be set in this function.

TIMER

Steps:

1. Press TIMER key.
2. Use the number keys to enter needed time.
3. Press POWER.
4. Press number 0.
5. Press START.

CHILD LOCK

A. To set the child lock.

Steps: In waiting mode, press the STOP key for 3 seconds. The system will "beep" and the LOCK indicator will light up. All other programs are not functional at this stage.

B. Unlock the child lock.

Steps: press the STOP key for 3 seconds. The system will "beep" the LOCK indicator will shut off and other programs will be functional again.

12. Press number keys to enter power.

Microwave usage common sense

1. If the oven does not work, check the following:
 - If the oven door is closed properly.
 - If the child lock is locked.
 - If the unit is plugged in properly.
 - Household protector is cut or burned.

2. If the oven accidentally starts with no contents inside the cavity do the following: Press STOP immediately or open the oven door to stop it.
3. When voltage fluctuates, the microwave will work still, but the output power may be affected.

Microwave oven cleaning and care

Important
Never use powerful cleaning agent, benzene, sand powder or metal brush to clean any parts of the oven.

1. Before cleaning the cavity, shut off the microwave oven, and remove plug from the socket.
2. Regularly clean the cavity. When food or soup splatters onto the cavity wall, clean with a wet cloth. If it gets very dirty, use a soft detergent, never use rough or abrasive detergents.
3. Glass tray must be cleaned regularly. First use warm soap water then use clean water to wipe.
4. Turntable shaft or cavity floor must be cleaned regularly. Soft detergent may be applied. warm soap water may be used to clean shaft and replace it after cleaning.
5. The door seal must be clean regularly, first use soft dry cloth dipped in the soap water then use a soft dry cloth to wipe it.
6. After using a soft dry cloth dipped in soap water to clean the outer surface of the oven, wipe clean with a dry cloth, be careful to prevent water sipping into oven seals or air duct.
7. If control panel gets wet, use a soft cloth to clean it, do not use crude, abrasive detergent to wipe the control panel. Open the door during cleaning to avoid accidentally starting the oven.
8. If there is water drops due to steam, wipe off with a soft cloth.
9. If there is a foreign smell inside the oven, erase it with a cup of lemon water for 5-7 minutes.
10. If the oven is not used for a long time, plug off from power source and place it in an airy and non-erosive gas environment.
11. If the oven malfunctions, it must be repaired by a qualified person, anyone other than a qualified person servicing the oven will be dangerous.