

Fisher & Paykel

Built-in oven
OB60 single, double,
and compact models

User guide

NZ AU GB IE SG

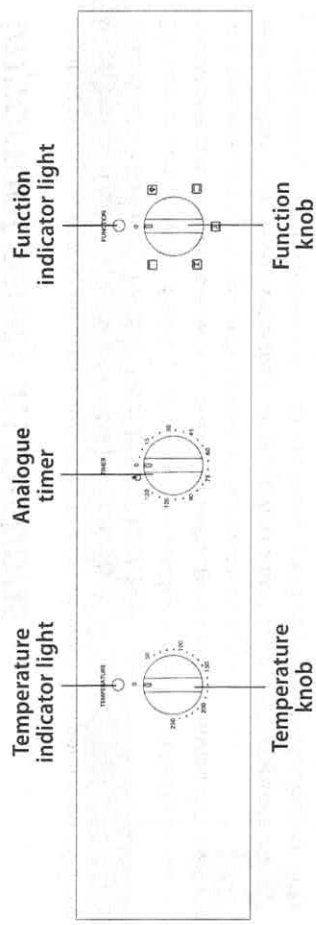


Fig. 1 Control panel – Models with analogue timer

Important!

The oven will not work until the analogue timer has been set either to manual mode or to cook with 'auto-off'.

To set manual mode

- Turn the analogue timer knob clockwise to the symbol. You should be able to hear a click as you turn the knob beyond the 120-minute mark.
- You have now set the oven to manual mode.
- Note: you may hear some ticking even after you have set the oven to manual mode. This is normal.

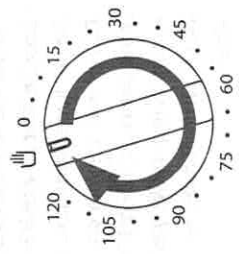


Fig. 2 Setting the oven to manual mode

To set cooking with 'auto-off'

See section 'Cooking with 'auto-off'' for instructions.

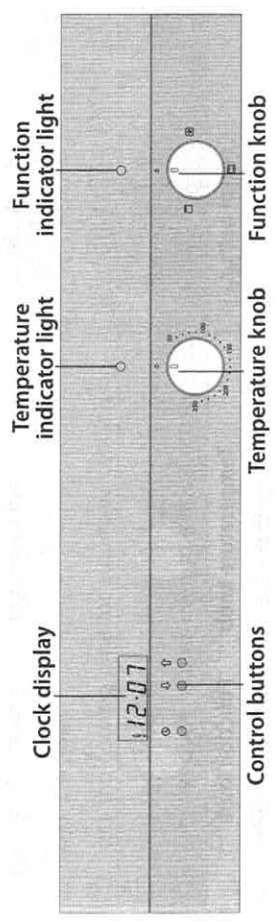


Fig. 3 Control panel- Compact models with two cooking functions

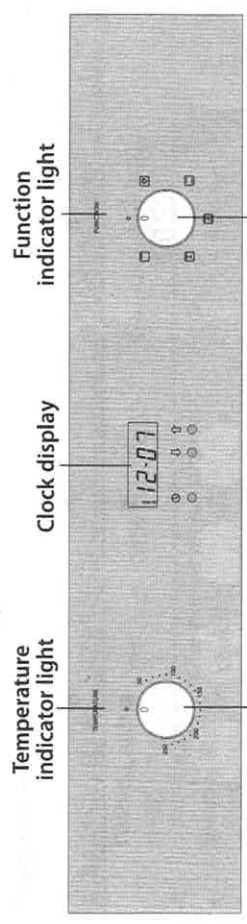


Fig. 4 Control panel- Single models with four cooking functions

Buttons

- sets the clock, shows the time of day when oven is cooking with 'auto-off' set
- decreases time and beep volume
- increases time

Illuminated symbols

If the display shows It means that...

	It means that...	For more information
A	flashing	The oven is ready to be set for cooking with 'auto-off'.
U	steadily lit	The oven is set for cooking with 'auto-off'.
O	flashing and beeping	Cooking with 'auto-off' has finished.

See section 'Cooking with auto-off'

To set the clock

When the power to the oven is turned on or restored after a power failure, will flash in the display.

- Press .
- Press and until you have the correct time of day.

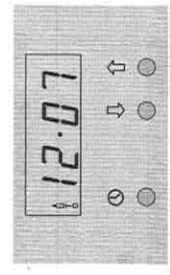


Fig. 5 Clock display and control buttons

For more information

6 Oven controls and setting the clock

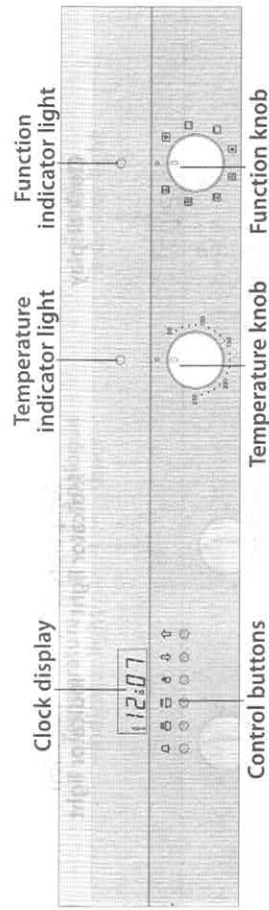


Fig. 6 Control panel- Compact and single models with seven cooking functions

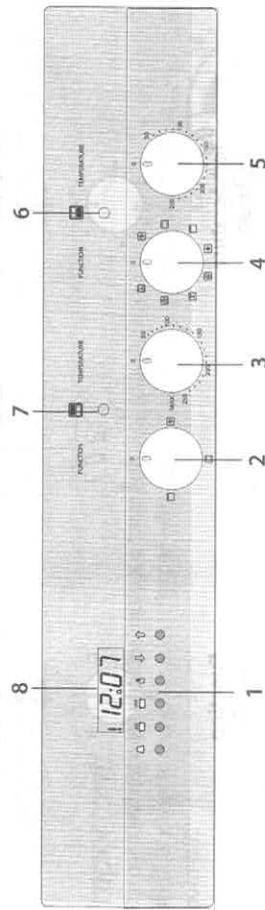


Fig. 7 Control panel- Double models with seven-function full oven and two-function compact oven

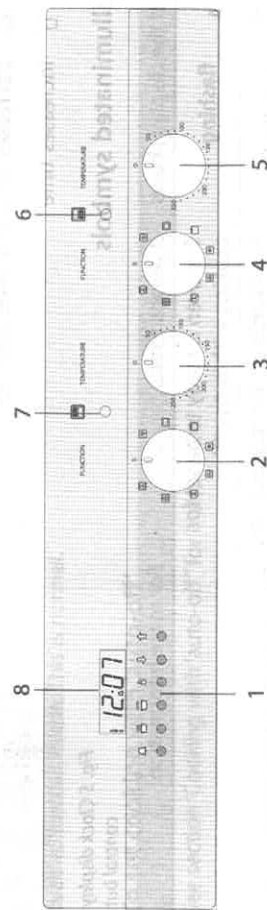


Fig. 8 Control panel- Double models with two seven-function ovens (full or compact upper oven)

- 1 Control buttons
- 2 Upper oven function knob
- 3 Upper oven temperature knob
- 4 Lower oven function knob
- 5 Lower oven temperature knob
- 6 Lower oven temperature indicator light
- 7 Upper oven temperature indicator light
- 8 Clock display

7 Oven controls and setting the clock

- Buttons**
- sets the timer
 - sets the cooking time for automatic cooking
 - sets the stop time for automatic cooking
 - sets the clock, returns oven to manual mode, cancels automatic cooking
 - decreases time and beep volume
 - increases time

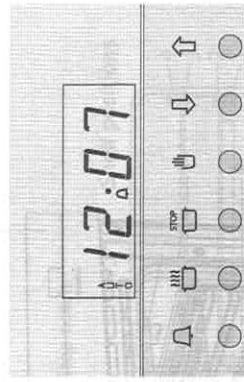


Fig. 9 Clock display and control buttons

Illuminated symbols

If the display shows 'It means that...'

flashing with The clock needs to be set. See instructions below.

steadily lit The oven is set for automatic cooking.

flashing and beeping Automatic cooking has finished or has been set incorrectly (the stop time is before the time of day).

steadily lit The timer is set. See section 'Using the electronic timer'

flashing and beeping The set time is up.

To set the clock

When the power to the oven is turned on or restored after a power failure, and AUTO will flash in the display.

- 1 Press .
- 2 Press and until you have the correct time of day.

Depending on your model, you may only have some of these functions.



OVEN LAMP

Only the oven light comes on. It remains on in all the cooking functions.



BAKE

This is the traditional method of baking. It is best to bake on only one shelf at a time in this function. Ideal for large cakes and dishes that bake for several hours.



GRILL

Use with the oven door closed and the temperature set no higher than 225°C. For best results, use the topmost shelf position when you want quick browning (eg toast).



DEFROST

Only the oven fan comes on. Use with the temperature set to off (0). The fan circulates air around the oven, speeding up the defrosting process by approximately 30%. Note: this function is not for cooking food.



FAN FORCED

Great for multi-shelf cooking. The consistent temperature ensures baking is well risen. Cookies are crisp on the outside and chewy in the middle, meat and poultry are deliciously browned and sizzling while remaining juicy and tender.



FAN GRILL

Use with the oven door closed and the temperature set no higher than 220°C. Ideal for roasting tender cuts of meat and poultry. Use the lower shelf positions for larger items eg a whole chicken.



OR WARM

Use this function to keep cooked food hot and to warm plates and serving dishes. To reheat food from cold, set the temperature to 150°C and reduce it to 70-100°C only when the food is piping hot. Note: this function is not for cooking food and the temperature cannot be set higher than 150°C.



FAN BAKE

Ideal for dishes like lasagne that need to brown on top and also single trays of small cakes or biscuits that bake in less than an hour.

Important!

Safe food handling: leave food in the oven for as short a time as possible before and after cooking or defrosting. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warmer weather.

Notes on baking:

- Preheat the oven before baking.
- Do not place anything, including water, ice or aluminium foil on the oven floor.
- Remove the fat filter before baking (some models only).

Using the fat filter (some models only)

- Use the fat filter only when roasting meat and poultry on Fan Bake, Fan Grill or Fan Forced. It helps to keep your oven clean and reduces splatter and smoking.
- Clean the fat filter after every use. See 'Care and cleaning'.
- Remove the fat filter before baking: gripping the top flap, slide up to unhook it from the rear panel.
- To replace the fat filter: align with the circle in the rear panel, then slide down to hook into place.

Important!

if the fat filter is not cleaned after every use, the grease build-up will block and shorten the life of the fan element.

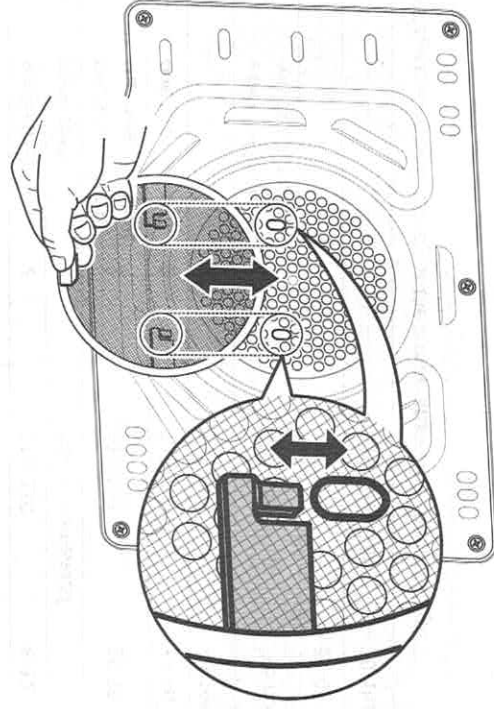





Fig. 14 Removing and replacing the fat filter

If you can't find an answer to your problem in the chart below, or if the problem cannot be fixed, you will need technical help. Contact your Authorised Service Centre or Customer Care.

Problem	Possible cause	What to do
The oven is not heating and the oven light is off.	No power supply to the oven. <i>Models with analogue timer:</i> the oven has not been set to manual mode. <i>Models with electronic clock:</i> the clock has not been set. <i>Models with six-button electronic clock:</i> the oven is set for automatic cooking.	Check that the oven is connected to the power supply and the power is turned on. If it is and the oven still doesn't work, there may be a power failure in your home or area. Set the oven to manual mode by turning the analogue timer knob clockwise to the  symbol. Set the clock. See 'Oven controls and setting the clock' for instructions. See section 'Automatic cooking' for information.
Electronic clock models:   is flashing in the clock display and the oven will not work.	The power to the oven has been turned on or restored after a power failure.	Set the clock. See 'Oven controls and setting the clock' for instructions.
The oven light does not come on, but the oven is heating.	The light bulb has blown.	Replace the bulb. See instructions in 'Care and cleaning'.
Condensation: droplets of water in or around oven (e.g. on control panel, oven door, rubber seal framing the cavity, surrounding cabinetry).	Food has high moisture content or local climate (temperature, humidity) is contributing to condensation.	Some condensation is normal. You can wipe the droplets off with a soft cloth.
Fan noise and ventilation air are coming from the oven both during and after use.	A cooling fan in the oven runs to keep the oven door and control panel cool at all times. It may continue to run after the oven has been turned off.	This is normal and requires no action.
Uneven baking results.	Oven not properly preheated. Incorrect function, bakeware, cooking time, or shelf position.	Put the food in the oven only when the temperature indicator light has gone out. See 'Baking charts' for recommendations.