



EZILoader



Clothes Dryer Instruction Booklet


Congratulations on your choice of clothes dryer
which will give you many years of easy loading
and easy drying in the Simpson tradition

Important Safety Instructions


LINT BUILD-UP IS A FIRE HAZARD

A clean lint filter reduces drying times, saves energy and avoids overheating. Overheating may also damage your clothes.


What happens if I forget to clean the lint filter?

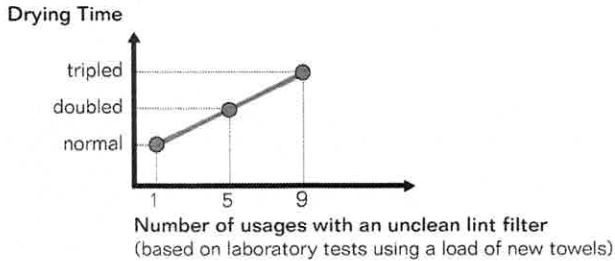


The lint filter is located at the front of your dryer at the bottom of the door opening.

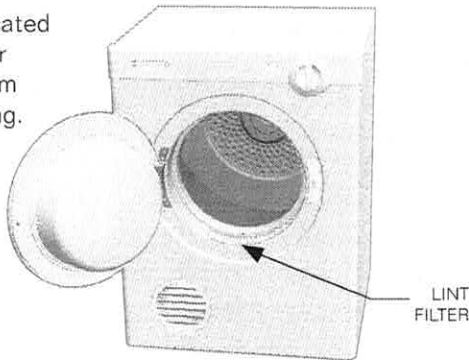

You must clean this lint filter after every load.

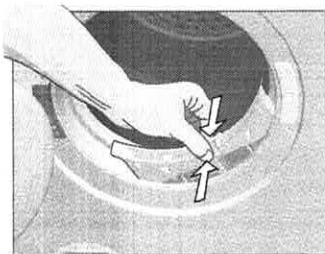

To remove the lint filter open the door and press the two pads together. Pull the lint filter out of the pocket.

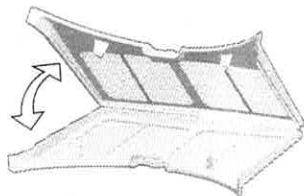

Open apart the lint filter and wipe or peel off the lint.

Ensure the lint filter 'clicks' when replacing. It can be inserted into the pocket either way.

- Never operate your dryer without the lint filter.
- Do not allow lint to build up around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

To avoid potential fire hazards, we recommend that you pay a qualified service technician to periodically clean your dryer. You must do this also when you change your mounting from upright to inverted, or vice versa.

DRYING GUIDE

Your load, when dry must not exceed the rated capacity.

- 4kg for the 4kg Machine
- 5kg for the 5kg Machine
- 6kg for the 6kg Machine

(See page 6 for a table of average weights of laundry items)

Always check your labels for the drying symbols which the International Care Labelling Code now uses.



- **Permanent press and synthetics** - take out as soon as the dryer stops to reduce wrinkles.
- **Woollen articles** - not recommended. Pull them to their original shape, then dry them flat.
- **Woven and loop knit materials** - may shrink, by varying amounts, depending on their quality. Do not use the 'hot' setting for these fabrics. Always stretch them out immediately after drying.
- **Fibre or leather materials** - always check the manufacturer's instructions.
- **Baby clothes and night gowns** - acrylic clothing or sleepwear use only on the 'warm' setting.
- **Rubber and plastics** - Do not dry any items made from or containing rubber or plastics, such as aprons, bibs, babies' waterproof napkins, curtains, tablecloths, shower caps, clothes fitted with foam rubber pads, pillows, galoshes, or rubber coated tennis shoes.
- **Fibreglass** - not recommended. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer, and irritate your skin.

During the drying cycle, if you want to

- add or take out clothes, or
- check the dryness of the load,


turn down the timer to 'Airing' for at least one minute before opening the door. This is to prevent scorching or possible self combustion of the fabric.

Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

Note: We strongly advise against the use of fabric conditioners of the sheet type that are added to the clothes in the drum. These products may lead to rapid blockage of the lint filter and inefficient operation of your dryer.

Quick 5 Step Operating Guide

- 1** Load your dryer loosely until it is no more than **TWO THIRDS FULL**. Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.

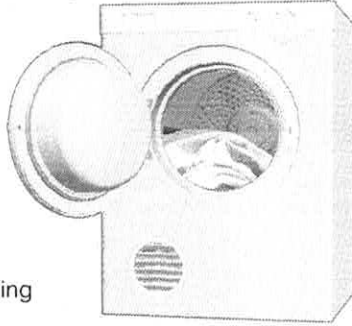



Overloading will:


- Reduce efficiency
- Increase drying time
- Increase the risk of creasing

Do not load clothes or other articles which are dripping wet into your dryer.

- 2** Select one of the two (2) temperature settings.

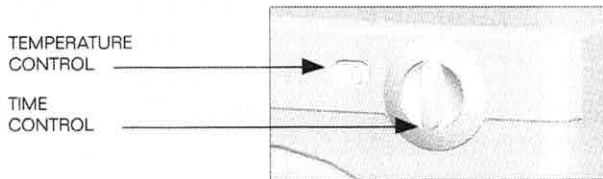

 **'Warm'** for delicate items which can shrink, such as synthetics, underwear, etc.

 **'Hot'** for heavy, durable items such as towels and flannelette sheets.

- 3** Select the drying time.


Turn the knob control in the direction of the arrow only (clockwise). Turning the knob in opposite direction (counter-clockwise) will damage the timer.

This damage will not be covered by product warranty.

- 4** Switch On

The dryer will not operate unless the safety button on the door is fully pressed in.

DOOR
SAFETY
SWITCH
BUTTON

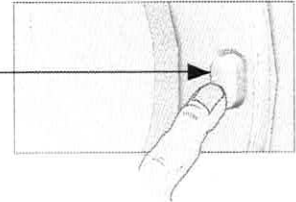

- 5** Clean Lint Filter

After every load clean the lint filter located at the front of your dryer to reduce drying times and avoid overheating.

STANDARD FEATURES

Reversing Action

The drum is designed to turn one minute in each direction, clockwise and anti-clockwise. This reduces tangling and gives more even drying in a shorter time.

Cooling Down

At the end of the drying cycle, there is automatically a time of no heat, to cool down the load and minimise creasing.

Useful Hints

- Never tumble dry the following: Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
 - Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal parts were to come loose from the garment. Place such items in a bag designed for this purpose.
 - For nylon socks and other small light items, place them in a bag designed for this purpose. This will stop these items being caught in the lint filter cavity.
 - Check and empty pockets. Clips, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
 - Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron strings to prevent tangling.
 - Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible in your washing machine.
 - Drying time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
 - For best results, sort the load according to fabric types. Such as heavy items which may take longer to dry, eg towels, flannelette sheets etc, than ones which dry quickly, eg poly/cotton shirts and sheets.
 - Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.
- Note: Some fabrics will collect lint from other clothes and items. Separate the lint 'givers' and the lint 'collectors' to minimise this problem.**
- Clothes that give lint include towels, nappies, chenille.
Clothes that collect lint include corduroy, synthetics and permanent press garments.
- If individual items are still damp after drying, set a 30 minute post drying time. This will be necessary particularly for multilayered items (eg collars, pockets, etc).
 - Always clean the lint filter - this will reduce drying time and save you money.

Useful Hints, Troubleshooting & Accessories

USEFUL HINTS (continued)

- The laundry must be thoroughly spun before tumble drying.
- Easy-care items eg shirts, should be briefly pre-spun before drying (depending on the crease resistance approximately 30 seconds)
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clothes or towels containing sand or grit should be washed first.

To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

TROUBLESHOOTING

Check the points listed here **before** you call for help, and **make sure that you have followed the Important Safety Information on pages 2 & 3.**

If you can't start your dryer, check these probable causes.

- Plug is not firmly in socket, or power not turned on.
- You have blown a fuse. Check that power point with another appliance.
- You have not closed the dryer door or pushed in the door safety switch button.
- You have not turned the control knob to the setting you want.

If your clothes are still wet:

- The selected drying time was insufficient. Turn the control knob to a longer time setting.
- Longer time may be needed when the room temperatures is 10°C or less.
- Check that the lint filter is not blocked.
- Check to see that you have read all the instructions carefully.
- Contact the Service Centre if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Centre will need this information.

Important

To operate efficiently the clothes dryer must have an unrestricted air supply and exhaust ventilation.

Service calls resulting from installation where ventilation is restricted are not covered by warranty.

THE COST OF THIS TYPE OF CALL WILL BE CHARGED TO THE CUSTOMER.

Should you require further instructions in the use and care of your clothes dryer please contact the CUSTOMER CARE CENTRE on the phone numbers listed:

Australia... **1300 363 640 8am to 7pm EST & 8pm EDST**
Monday to Friday

New Zealand... **(09) 573 2384 8am to 5pm**
Monday to Friday

If you have a warranty or spare parts enquiry you should call the number listed on page 7.

ACCESSORIES

You can buy both the venting kits and the stacking kit (as mentioned on page 4) from you local appliance shop or Electrolux Home Products Pty. Ltd. Spare Parts Distributor.